



LOWER LEG DEFLECTOR SHIELDS WITH ACCENTS 7768

PARTS INCLUDED

- 1 Right Side Lower Leg Deflector Shield
- 1 Left Side Lower Leg Deflector Shield
- 1 Right Side Fender Mount Accent
- 1 Left Side Fender Mount Accent
- 1 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Clean the lower fork leg (PIC 1) and fender mount thoroughly. Using a mild soap and warm water, clean the lower fork leg making sure to remove all contaminants. Failure to clean this surface will result in poor adhesion. Rinse and dry the area completely.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

STEP 3 As shown in PIC 2, test fit the Fender Mount Accent to the front fender mount boss. The accents are marked left and right. Mark the location of best fit with masking tape to aid in final installation.

STEP 4 Test fit the Deflector Shield to the lower fork leg, note that there is a Left and Right side Deflector Shield. Make sure that mounting the Deflector shield will not interfere with the Fender Mount Accent. Mark the location of best fit with masking tape to aid in final installation.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
 - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 5 Clean the mounting area of the lower fork leg and fender mount with the supplied alcohol pad, dry the area completely with a clean cloth. First, rub the adhesive backing on the Fender Mount Accent to activate the adhesive. Remove the tape backing and apply over the fender mount using any markings made in Step 3 as a guide.

STEP 6 Press and hold the Fender Mount Accent in place for one full minute, full bonding strength will occur in 24 hours.

STEP 7 Rub the adhesive backing on the Deflector Shield to activate the adhesive. Remove the tape backing and apply the Deflector Shield to the lower fork legs using the markings made in Step 4 as a guide. Check that there is no interference between the Deflector Shields and the Fender Mount Accents.


STEP 8 Press and hold the Deflector Shield in place for one full minute, full bonding strength will occur in 24 hours.

STEP 9 Repeat all steps for the fork leg on the opposite side.

Ride On!

Kuryakyn®

PIC. 1

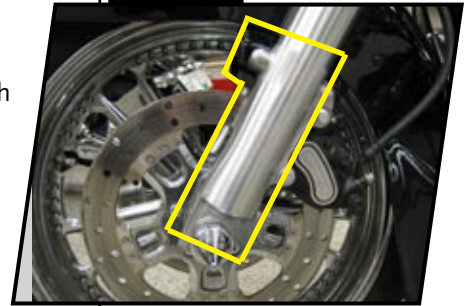

PIC. 2



PIC. 3



PAGE

2