



Part No. 2321-0232

MEB1917

REVISION 0

Trigger Lock Mounting Kit
MS Sportshield
Black

Aluminum parts are electrocoated (E-coated)
for durability and weather resistance.

Before assembly, read Warnings inside



WARNING


1. During installation, make sure that the windshield and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure , through the full range of adjustment, that the windshield and hardware do not hit the gas tank.
2. This is a detachable windshield, ALWAYS make sure the locking mechanism is fully engaged after installing the windshield.
3. The improper installation of this kit and related components could result in serious injury or death.



CAUTION

1. Memphis Shades windshields are made from Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water (mild dish-washing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your windshield, and will void your warranty. For care and cleaning we recommend using **Memphis Shades All Kleer**, a unique cleaner/polish, bug remover and rain repellent that leaves a super slick surface that makes the next cleaning even easier.
4. At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the windshield to avoid reflections.

1. Kit Contents

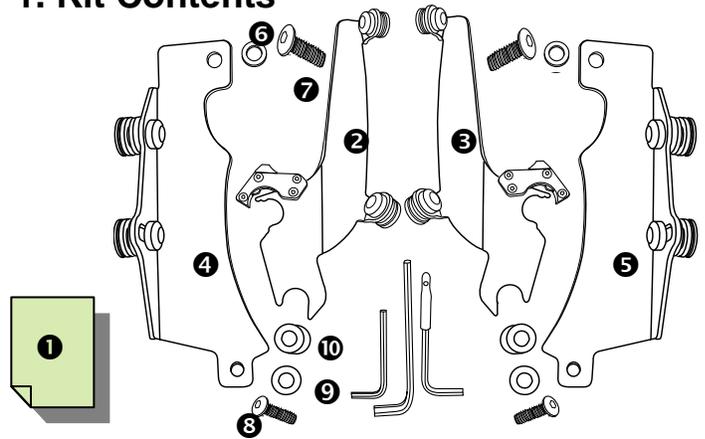

Ref	Code	Description	Qty
❶	I1917B	Mounting Instructions	1
❷	M1170EB	Clutch side mounting plate assembly	1
❸	M1171EB	Throttle side mounting plate assembly	1
❹	M1141EC	Clutch side mounting bracket assembly	1
❺	M1142EC	Throttle side mounting bracket assembly	1
❻	R337	10mm SS flat washer	6
❼	R349	10mm x 20mm SS button head bolt	2
❽	M366	8mm x 30mm SS socket head cap screw	2
❾	R312	8mm SS flat washer	2
❿	R336	3/4" x 3/8" lower bolt spacer	2

2. Mounting Instructions

Additional tools required, that are not included in this kit. Thin blade screwdriver to pry-up trim topper.

1. Cover gas tank and front fender with towels to avoid damage during installation.
2. Install the windshield mounting plates onto the windshield, using the bolts that are pre-assembled on the mounting plates. The Santoprene grommets should be inserted through the holes in the windshield so that the flat round part of the grommet lies flat on each side of the plastic. Tabs point in towards the headlight. (Fig 1)
3. Locate and remove the two trim toppers, located on the upper triple tree. (Fig 2)
4. Using a 4mm Allen wrench remove the lower Turn Signal trim. Take care not to loose the small Brass Bushings. Also remove both Turn Signals with a 5mm Allen wrench. (Fig 2)

Continued overleaf.....

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

For Parts and Warranty Help, Contact:

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293

Visit us on the web at www.memphisshades.com or you can also reach us by email:

customerservice@memphisshades.com

**Trigger Lock Mounting Kit
MS Sportshield
Black**

2. Mounting Instructions, continued

5. Install throttle side bracket by loosely installing new 10mm x 20mm SS Button Head Bolt with one washer in front and two washers on back in upper triple tree as shown in Fig 3, Screw, washer, bracket then two washers.

6. Install Turn Signal and lower Bracket using new 8mm Socket Head Cap Screw with Spacer and washer in this order; Screw, washer, bracket, spacer and through Turn Signal and loosely tighten into lower triple tree. Tighten both upper and lower screw. (Fig 3) Repeat steps 5 and 6 on Clutch side.

7. Install the windshield by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. Lock the locking mechanism into place. (Fig 4)

8. Tighten all mounting bolts. Adjust the height, angle and alignment of the windshield and tighten ALL bolts.

Note: This is a detachable windshield, ALWAYS make sure the Locking Mechanism is Fully Engaged after installing the windshield! (Fig 4)

Fig. 3


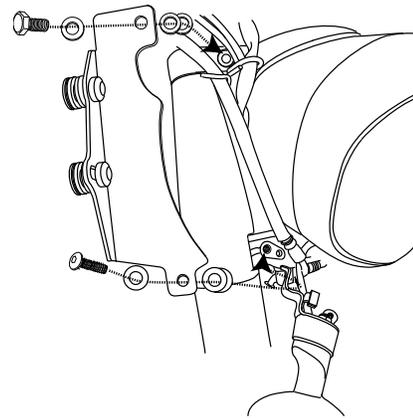


Fig. 4

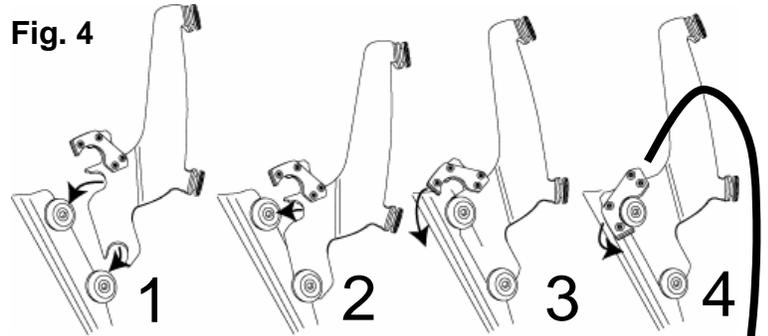

1. Place lower slot into lower bushing.
2. Rotate top slot into place.
3. Secure locking Mechanism.
4. Loosen Allen Bolt to adjust angle, then re-tighten Allen Bolt.

Fig. 1

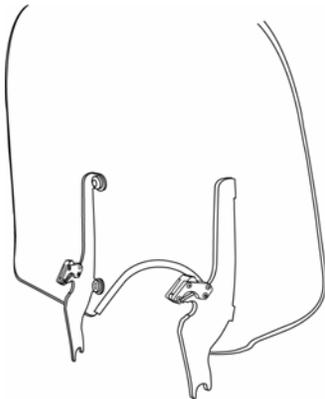


Fig. 2

