



Part No. 2321-0359

MEB2011

REVISION 0



Trigger-Lock Mounting Kit - Black
Bullet Fairing
Honda VTX1800 (Covered Forks)

CAUTION!


GAS TANK DAMAGE WILL OCCUR
 on some versions of this model if fork
 clamps are installed too high on the forks

**WARNING**

1. During installation, make sure that the fairing and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the windshield and hardware do not hit the gas tank.
2. This is a detachable fairing, ALWAYS make sure the locking mechanism is fully engaged.
3. The improper installation of this kit and related components could result in serious injury or death.

**CAUTION**

1. Memphis Shades fairings are made from Lucite® acrylic, and will last for years with proper care. Clean your fairings with plenty of soapy water (mild dishwashing liquid is best) and a soft cotton cloth. Use your bare hands to feel and dislodge bugs, or cover with a wet, soapy towel and let it soak. Don't use paper towels and scrape with anything. Small scratches can be removed with NOVUS #2.
2. Never use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."
3. Glass cleansing agents will cause severe damage to your fairing, and will void your warranty.
 For care and cleaning we recommend using **Memphis Shades All Kleer**, a unique cleaner/polish, bug remover and rain repellent that leaves a super slick surface that makes the next cleaning even easier.
4. At certain times of the day the Sunlight can reflect off the curvature of a fairing / windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or adjust the fairing / windshield to avoid reflections.

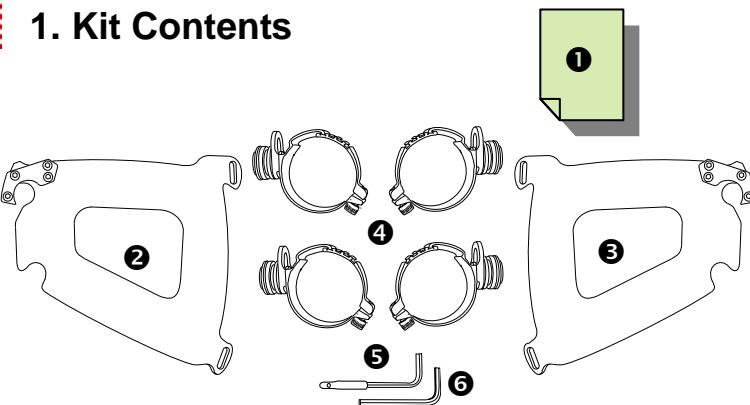1. Kit Contents

Ref	Code	Part Name	Qty
1	I2011	Mounting instructions	1
2	M1619EB	Clutch side mounting plate	1
3	M1620EB	Throttle side mounting plate	1
4	S1170EB	Extra large detachable clamp assembly	4
5	M310	Short arm allen wrench, 3/16	1
6	R352	Short arm allen wrench, 1/8	1

2. Mounting Instructions

Additional tools required that are not included in this kit. 7/16" or 11mm Wrench.

1. **Cover gas tank and front fender with a towel to avoid damage during installation.**

2. Install the Mounting plate assemblies **2** and **3** onto the fairing, using the bolts that are pre-assembled on the Mounting plate assemblies.

The Santoprene grommets should be inserted through the holes in the fairing so that the flat round part of the grommet lies flat on each side of the plastic. Tabs point in towards the headlight. (Fig 1)

3. Loosely install the four Fork Clamps **4** on the forks, approximately 2" apart, with the clamps 3/4" from the upper triple tree. (Fig 2)

4 Start with Fork Clamp Bushings adjusted to front of slot (Fig 3). then adjust as needed and check for clearance. (See warning above)

5. Slip the mounting plates and fairing onto the fork clamps, (Fig 4) while guiding the bezel over the headlight (Fig. 1) Secure the left and right side locking mechanism

continued overleaf.....

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

For Parts and Warranty Help, Contact:

Memphis Shades, Inc.

P.O. Box 429

Rossville, TN 38066

(901) 853 0293

Visit us on the web at www.memphishshades.com or you can also reach us by email: customerservice@memphishshades.com

2. Mounting Instructions, continued

6. Adjust the height, angle and alignment of the fairing and tighten **ALL** bolts.

Note: This is a detachable fairing, ALWAYS make sure the Locking Mechanism is Fully Engaged after installing the fairing! (Fig 5)

Fig. 1

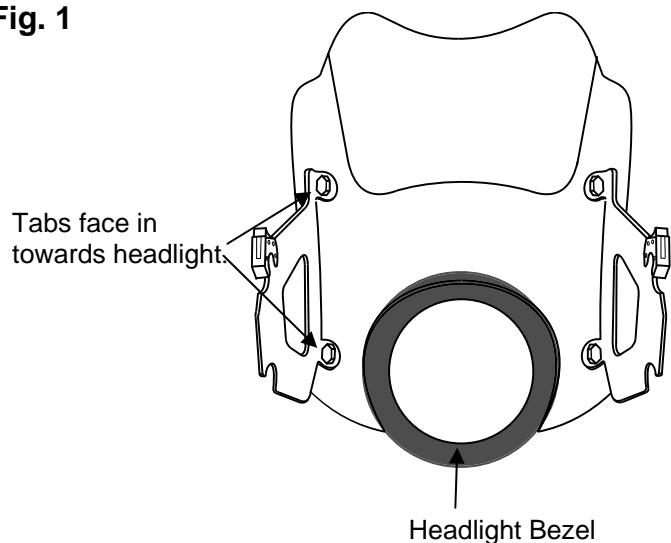


Fig. 2

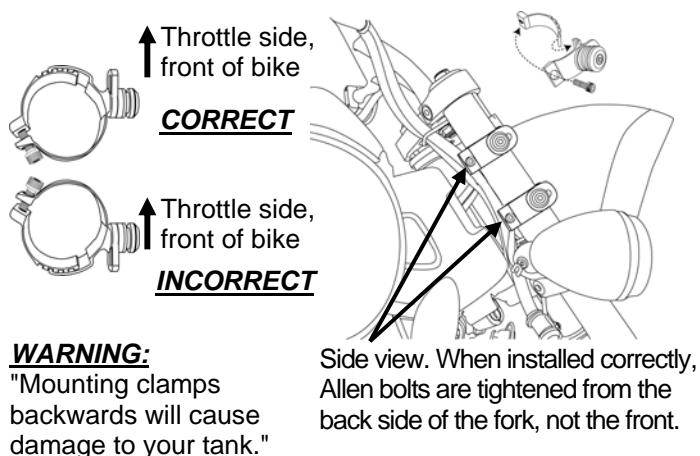


Fig. 3



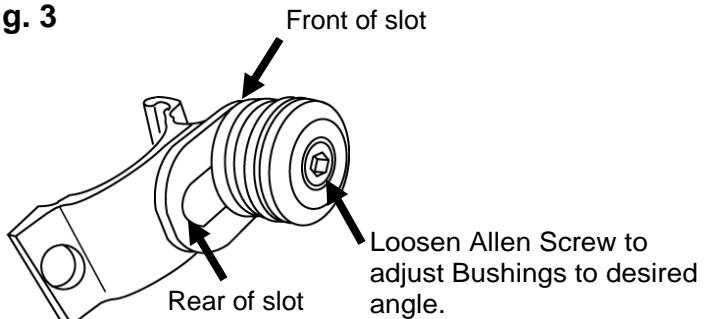


Fig. 4

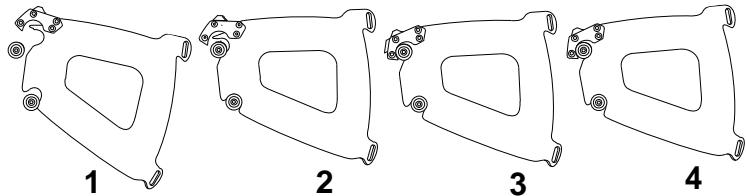

1. Place lower slot into lower bushing.
2. Rotate top slot into place.
3. Secure locking Mechanism.
4. Loosen Allen Bolt to adjust angle, then re-tighten Allen Bolt.

Fig. 5

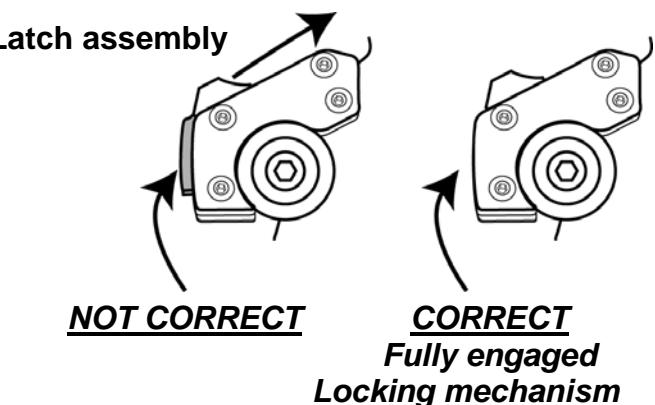

CAUTION!
GAS TANK DAMAGE WILL OCCUR
on some versions of this model if fork
clamps are installed too high on the forks