



MOUNTING INSTRUCTIONS

2321-0153 Sportshield



SUZUKI BOULEVARD C-90/C-90T (2005-2009) TRIGGER LOCK PLATES ONLY

⚠ WARNING

1. During installation, make sure that the windshield and hardware do not interfere with any cables or wiring when the forks are turned all the way in either direction. Also make sure, through the full range of adjustment, that the windshield and hardware do not hit the gas tank.
2. This is a detachable windshield, ALWAYS make sure the locking mechanism is fully engaged after installing the windshield.
3. The improper installation of this kit and related components could result in serious injury or death.

1. Cover gas tank and front fender with towels to avoid damage during installation.


2. Install the two mounting plates onto the windshield, using the nuts and washers provided. The small tab goes to the bottom, big one at the top. (Fig 1) Tabs face out away from the headlight when installed correctly.

NOTE: make sure that only the brake lines are under the bracket and **NOT** the turn signal wires. Do not pinch them.

8. Install the windshield by placing the lower slots into the lower mounting bushings. Slip the upper slots into the upper mounting bushings and gently but firmly seat the slots into place. Lock the locking mechanism into place, (Fig 4)

9. Adjust the height, angle and alignment of the windshield and tighten **ALL** bolts.

Fig 1

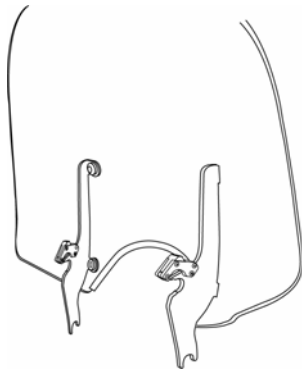

Memphis Shades warrants all product components, metal and plastic, against defects in materials and workmanship for 24 months.

FOR PARTS AND WARRANTY HELP, CONTACT:

MEMPHIS SHADES
P. O. Box 429
Rossville, TN 38066
(901) 853-0293

Visit us on the web at www.memphisshades.com or
you can also reach us at
customerservice@memphisshades.com

CAUTION

IMPORTANT CARE AND CLEANING INSTRUCTIONS


Memphis Shades Windshields and Lowers are made of Lucite® acrylic, and will last for years with proper care. Clean your windshield with plenty of soapy water — mild dishwashing liquid is best — and a soft cotton cloth. Use your bare hand to feel and dislodge bugs, or cover with a wet soapy towel and let it soak. Don't use paper towels and don't scrape with anything. Small scratches can be removed with NOVUS # 2.

NEVER use any glass cleaning products, petroleum based chemicals, or cleaning agents with ammonia, bleach or any other harsh chemicals. This includes (but not limited to) RainX, brake fluid, acetone, paint thinner, benzene and gasoline. "If it hurts your nose, it will hurt the plastic."

Glass cleansing agents will cause severe damage to your windshield, and will void your warranty.

NOTE: At certain times of the day the Sunlight can reflect off the curvature of a windshield and cause extreme heat build-up on motorcycle instruments and instrument panel. Take care when parking. Park facing the sun, place an opaque object over the instruments or position the bike to avoid reflections.

#	Code	Name	Qty
a	I1821	Instructions	1
b	M1340	Clutch side plate assembly	1
c	M1341	Throttle side plate assembly	1

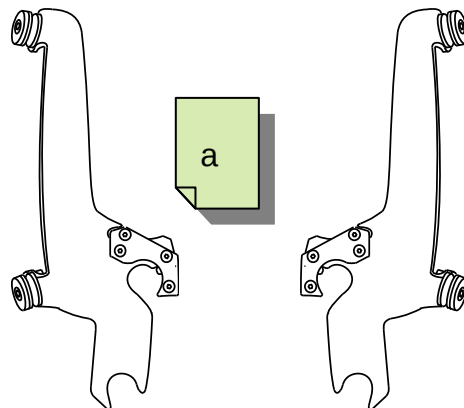




MOUNTING INSTRUCTIONS

2321-0153 Sportshield




SUZUKI BOULEVARD C-90/C-90T (2005-2009) TRIGGER LOCK PLATES ONLY


Fig 2

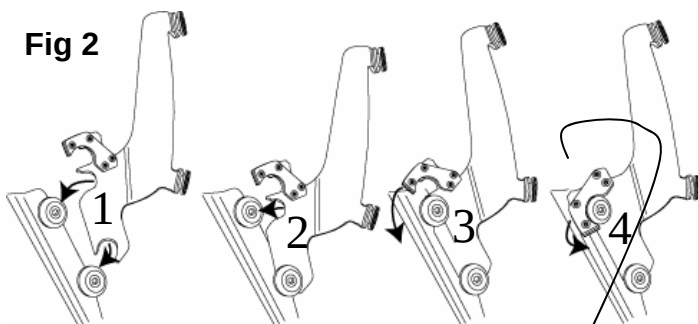

1. Place lower slot into lower bushing. 2. Rotate top slot into place. 3. & 4. Secure locking Mechanism.

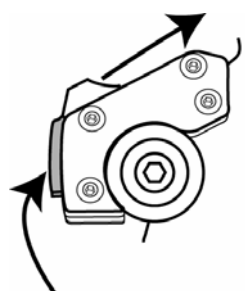

NOT CORRECT

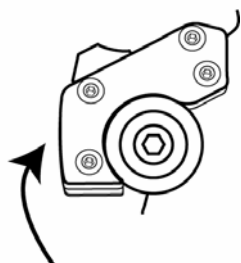

CORRECT
*Fully engaged
Locking mechanism*