





RM4 Plow Mount Installation Instructions

Yamaha 700 Wolverine Part# 4501-0526

Side picture show how all part connect Together after all is bolted up.

Install the $\frac{1}{2}$ " bolts and $\frac{1}{2}$ " nuts into the front of the removable mount. These are used as droop stops to keep the plow from drooping down too far. Thread them in about half way for now. Slide the removable mount into place on the machine mount and pin from the bottom with the cotterless pin. You can now attach your push tube and plow assemble.

Once the complete plow assembly has been installed on the machine put the blade straight and on the ground. Adjust both droop stop Bolts so there is a $\frac{1}{4}$ " to $\frac{1}{2}$ " clearance between the bolt heads and the push tube, tighten the locking nuts. Failure to adjust properly can put an excessive load on the mount, machine and winch, This may cause damage and will not be warranted.

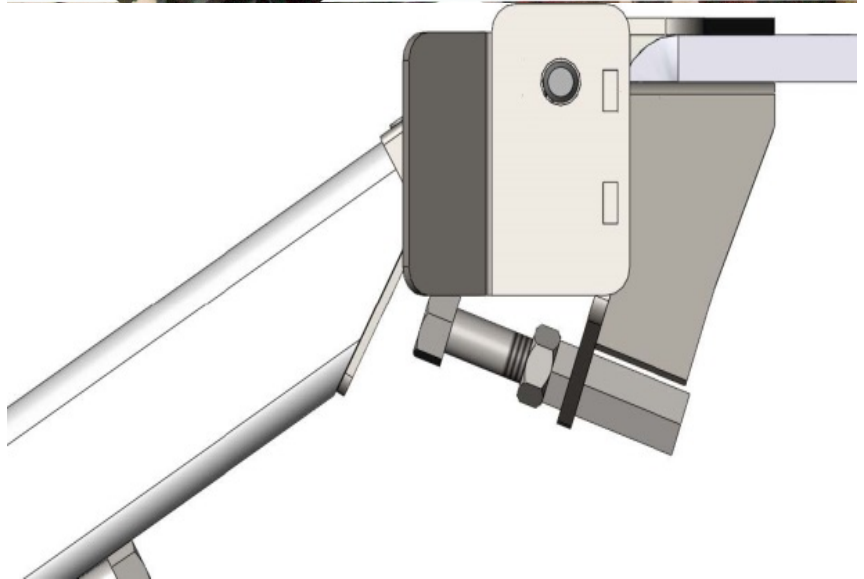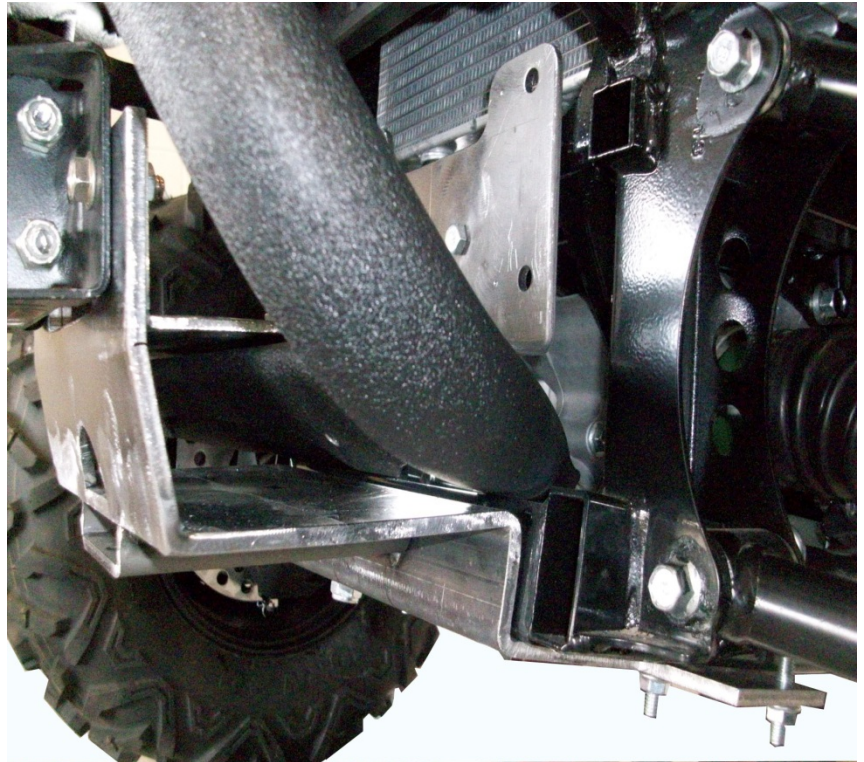



**RM4 PLOW MOUNT INTALLATION INSTRUCTIONS
YAMAHA WOLVERINE 700
PART# 4501-0526**

**(MUST REMOVE WINCH MOUNT TO INSTALL RM4)
RM4 plow mount attach to winch mount and will
Need to be a Moose or Yamaha winch mount.**

Remove the 2 lower bolts that hold the lower portion of the bumper to frame. Use the 2- 10mm x 70mm hex bolt to replace these bolts. (may need to loosen bumper completely to align) Tighten bolts down securley.

Place RM4 plow mount in place and attach to the 2- 10mm x 70mm hex bolts now hanging down below frame using the 2 – 10mm nylock nut and the 2 – 7/16 Flat washers

Att this point you can now reinstall the winch mount.

Place the 5/16 x 2 x 3 square u-bolts around the frame Just behind the front lower a-arm mount as per in the picture. U-bolt bolt will go arounf frame tube and down through the plow mount and tighten on using the 5/16 nylock nuts.

The upper portion of the mount will attach to the winch mount fairlead location with the 5/16 x 1 hex bolts and wiz nuts. Tighten all bolt securley at this Time.

The removable mount will attach to the mount on the Machine using the cotterless hitch pin going in from The bottom up. Your RM4 push tube will them lock In to the removable mount.

Quantity	ITEM NUMBER	DESCRIPTION
2	HDW9110	1/2 x 2 Hex Bolt
2	HDW7078	1/2 Hex Nut
1	HDW9185	1/2 x 1-1/2 cotterless hitch pin
2	HDW1037	10mm x 70mm Hex Bolt
2	HDW1040	10mm Nylock Nut
2	HDW2051	5/16 x Hex Bolt
2	HDW2406	5/16 x 2 x 3 Square U-Bolt
4	HDW7058	5/16 Nylock Nut
2	HDW7056	5/16 Wiz Nut
2	HDW9008	7/16 Flat Washer

