




RM4 PLOW MOUNTING INSTRUCTIONS  
POLARIS GENERAL 1000  
PART#

ITEM	PART#	QTY.	DESCRIPTION
1	2479-100	1	RM4 Main Mount Weldment
2	2493-101	1	Removable Mount
3	HDW9111	2	10mm x 35mm Hex Bolt
4	HDW9088	2	1mm x 50mm Hex Bolt
5	HDW9008	2	7/16 Flat Washer
6	2479-6	2	Spacer Block
7	HDW9185	1	1/2 x 1-1/2 Cotterless Hitch Pin

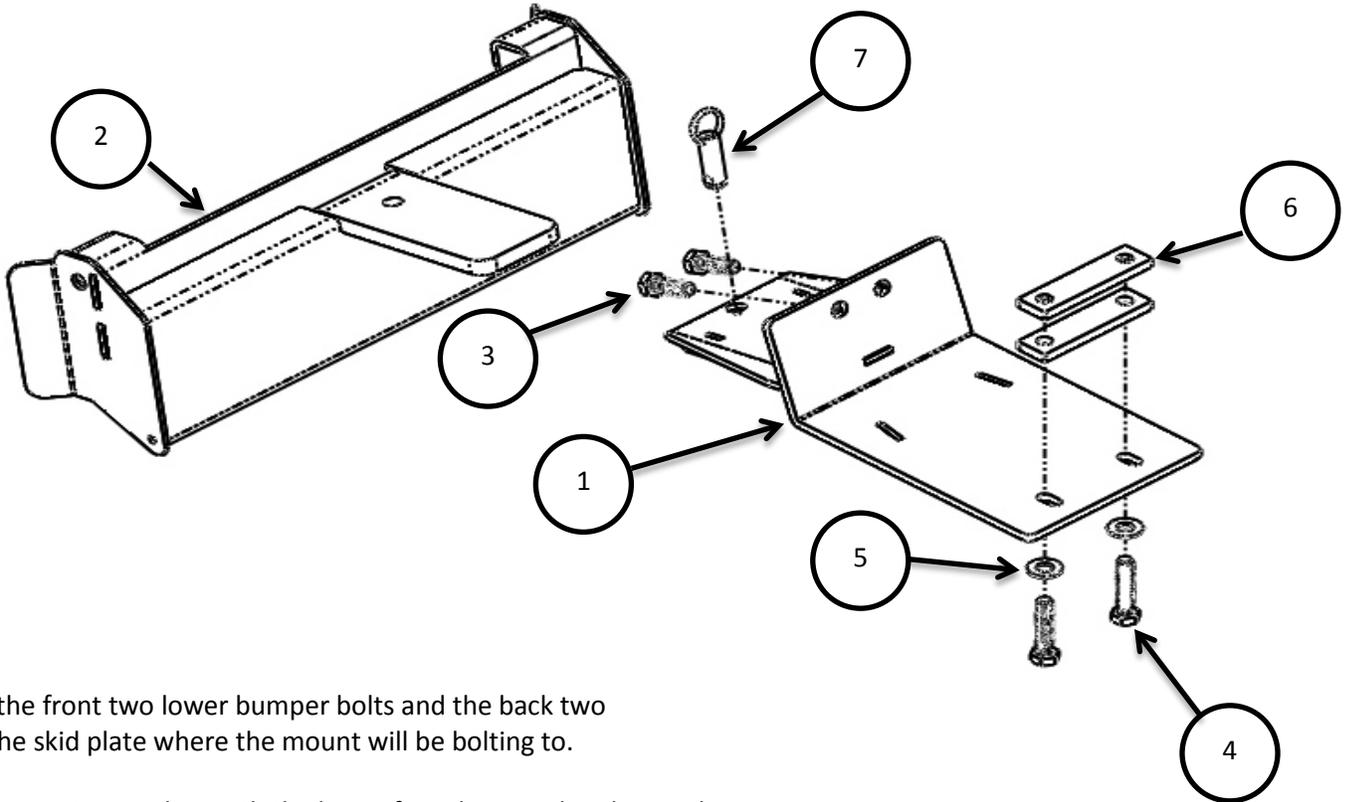


Remove the front two lower bumper bolts and the back two bolts in the skid plate where the mount will be bolting to.

Slide the mount up underneath the lower front bumper bracket as shown. Use the 2 – 10mm x 35mm hex bolts in this location. Now attach the bottom portion using the 2 – spacer blocks and the 2 – 10mm x 50mm hex bolts with the 2 – 7/16 flat washers, assemble and install as picture on the right shows.

Removable mount will slide in to main mount plate and secure with the cotterless hitch pin.

Align mount and tighten all bolts securely. Retighten after using for a couple plow seasons.

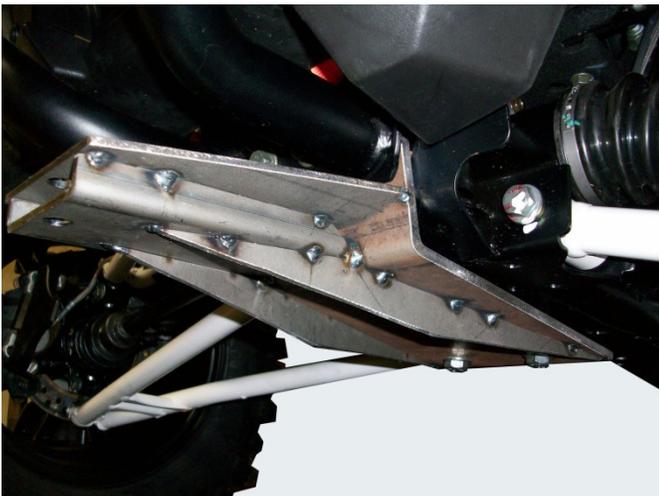

For Question or Comment Please Call 763-689-4800

INST2479

