



ITEM	QTY.	PART#	DESCRIPTION
1	1	2480-100	Plow Mount
2		HDW9110	Pre-installed in push tube
3		HDW7078	Pre-installed in push tube
4	4	HDW9048	3/8 Lock Washer
5	4	HDW7061	3/8 Nylock Nut
6	4	HDW9029	3/8 USS Flat Washer

POLARIS RANGER RM4 PLOW MOUNT INSTRUCTIONS

PART# 4501-0770


NOTE: *Grayed items are not included in bolt bag. They are pre-installed in the push tubes.*

1. The studs and locating pins on the inside of the mount will align with the holes in the front bumper. The threaded studs will line up with the third hole from the top and the bottom hole on each side. The large locating pins will align with the center holes. The plastic helps reduce paint wear on the bumper.
2. Hold the mount in place and use the USS flat washer, then lock washer and nylock nut to secure going on each stud.
3. The droop stop bolts (item 2-3) are pre-installed in the push tubes and are not included in the mount kit.
4. Once the complete plow assembly has been installed on the machine, put the blade straight and on the ground. Adjust both droop stop bolts so there is 1/4" - 1/2" clearance between the bolt heads and the bottom of the push tube. Tighten the lock nuts.



PART# 4501-0770

Install lock washers and knobs onto the mount from behind the bumper

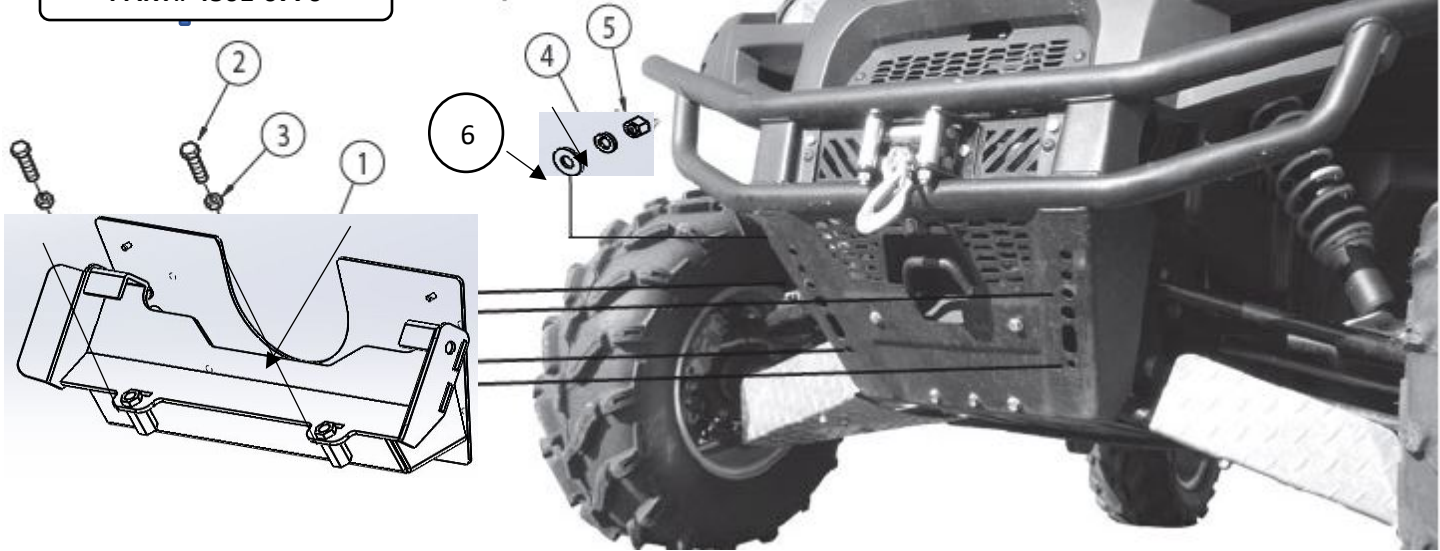

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).

INST2480PF