




## YAMAHA

03-06 KODIAK 450, 00-05 KODIAK 400,  
 04-06 BRUIN 350, 06-09 WOLVERINE 350/450,  
 07-13 GRIZZLY 350 (IRS & Straight Axle),  
 07 GRIZZLY 400, 07-12 GRIZZLY 450

Remove and retain the 6 flange bolts that hold the plastic floor boards down to the foot peg assembly. You will need to pull the floor board assembly up to get the u-bolts over the floor board mounts as shown. Remove the small panel on the left side footpeg bracket by drilling out the rivet.

Align mount to u-bolts and drain hole and use the flat washers and nylock nut to secure. Align and tighten firmly.

Push tube will pin up to tabs on mount using the wire loop pins that can with push tube kit.

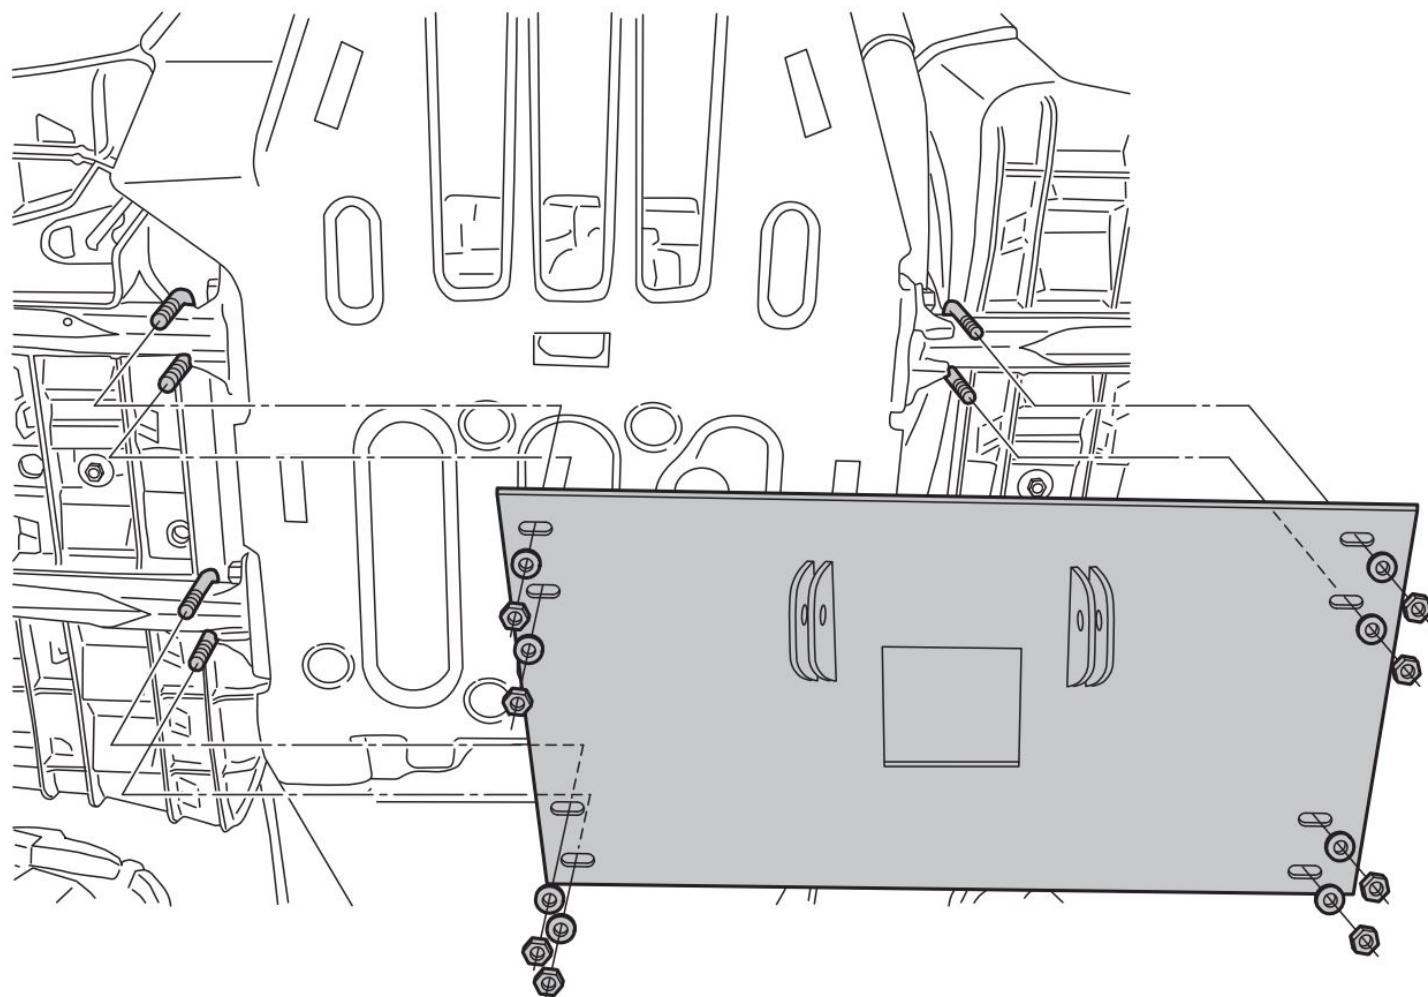

ITEM	PART#	QTY.	DESCRIPTION
1	2771-70	1	Plow Mount Weldment
2	HDW2054	4	5/16 x 1-1/4 x 2-1/4 Sq. U-Bolt
3	HDW9002	8	5/16 Flat Washer
4	HDW7058	8	5/16 Nylock Nut

PART# 4501-0618