


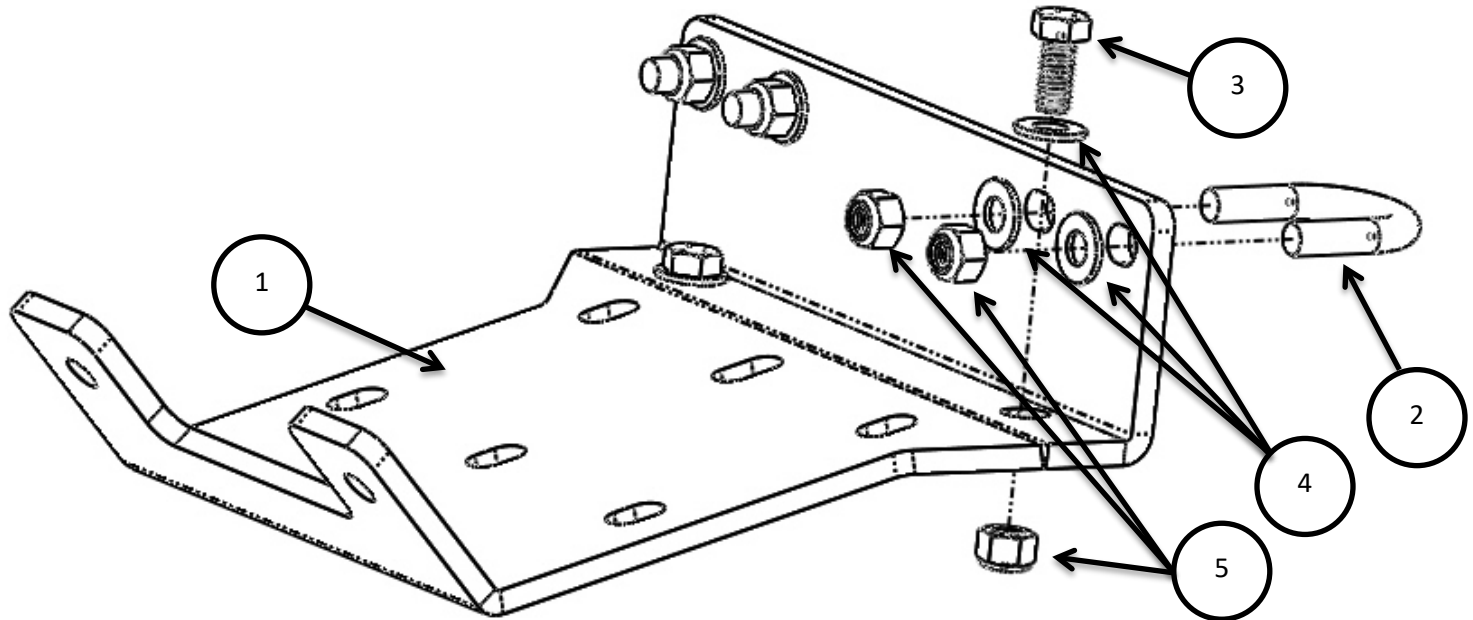

WINCH MOUNT INSTALLATION INSTRUCTIONS
2017 ARCTIC CAT ALLTERA 400,500
PART# 4505-0630

ITEM	PART#	QTY.	DESCRIPTION
1	1502-1	1	Winch Mount Plate
2	HDW2150	2	5/16 x 1-1/8 x 1-3/4 Rd. U-Bolt
3	HDW2050	2	5/16 x 3/4 Hex Bolt
4	HDW9002	6	5/16 Flat Washer
5	HDW7058	6	5/16 Nylock Nut



Install winch as illustrated.


Winch mount will lay on top of front bumper cross bar and on top of the tabs on the frame tubes.

On the tabs on the frame tube, place the (3) 5/16 x 3/4 hex bolt with (4) washers down through the mount and the tab and place (5) nylock nuts on bottom. Do this on each side.

Next use the (2) 5/15 x 1-1/8 x 1-3/4 U-bolts to go around the frame tube and through the mount plate. Use the (4) flat washers and the (5) nylock nuts to secure.

Winch will sit on top and bolt up through the bottom.

Wire winch to winch manufacturer's instructions.

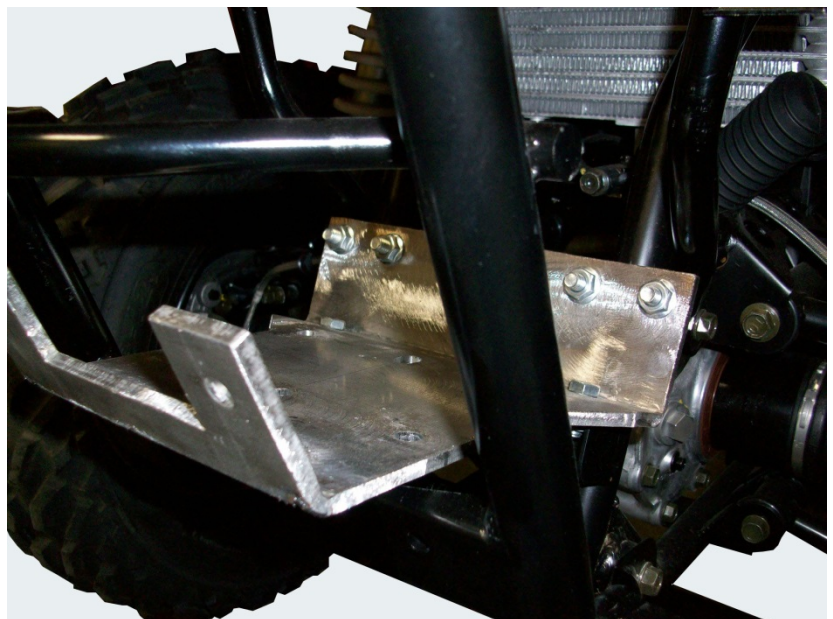

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).