



### WINCH MOUNT INSTRUCTIONS

00-02 YAMAHA KODIAK 400 ULTRAMATIC

PART# 4505-0650

**NOTE:** Fairlead is not included with this kit.

ITEM	QTY.	PART#	DESCRIPTION
1	1	1542-1	Main Mount Plate
2	1	1542-2	Fairlead Mount
3	2	HDW1054	8mm x 25mm Hex Bolt
4	2	HDW2106	3/8 x 3/4 Hex Bolt
5	2	HDW2050	5/16 x 3/4 Hex Bolt
6	2	HDW7058	5/16 Nylock Nut
7	2	HDW7061	3/8 Nylock Nut
8	2	HDW9002	5/16 Flat Washer

Remove the skid plate from the front bumper and under the frame.


Install the main winch mount plate to the inside of the bumper and the back side of the bumper tabs using the 3/8 x 3/4 hex bolts, washers and nylock nuts in the top tab location. Use the 8mm x 25mm hex bolts in the bottom where it threads into the frame tube.

Install winch and orientate it so the cable will spool off the top of the drum, this puts less stress on the cable.

Install the fairlead bracket with the 5/16 x 3/4 hex bolts, washer and nylock nuts. This bracket can go either way for fairlead to be straight or lean forward if using to pick up snowplow.

Reinstall the skid plate and tighten all bolts.

Using the instructions provided with the winch, wire accordingly.

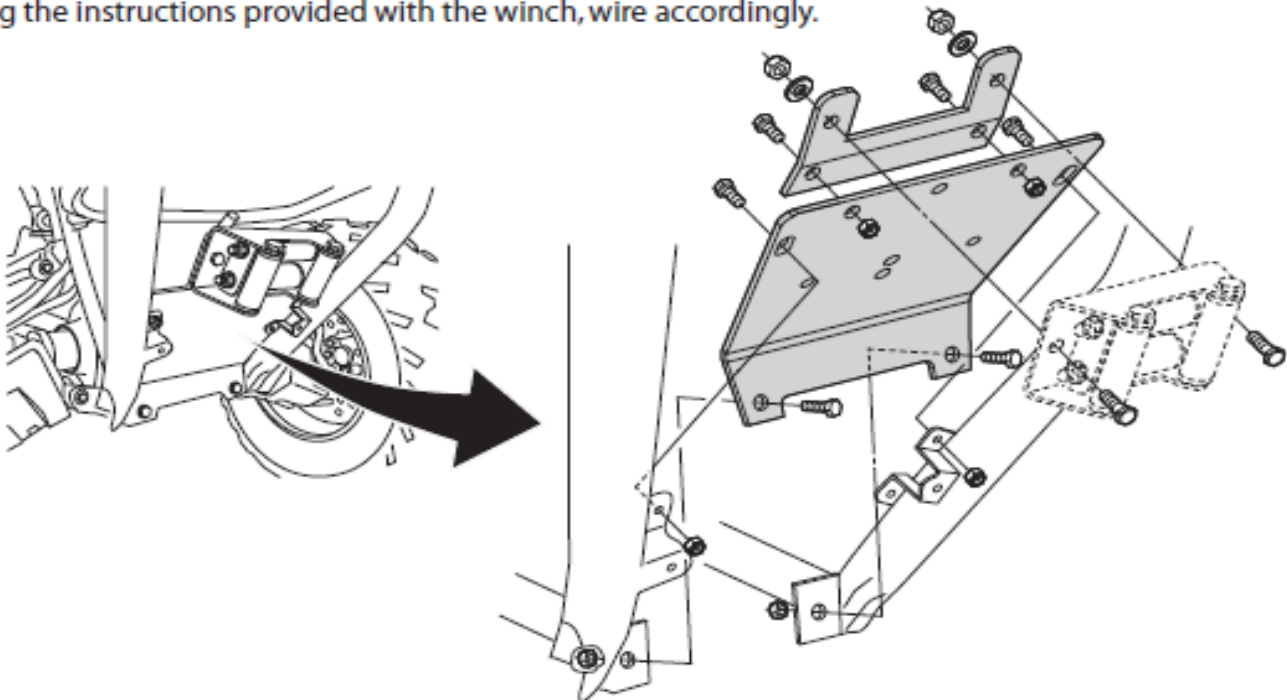

**FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).**

INST1542PF