



YAMAHA WOLVERINE

WINCH MOUNT INSTRUCTIONS


95-05 YFM 350 WOLVERINE

PART# 4505-0665

(NOTE: Fairlead is not included with this kit).

ITEM	PART#	QTY.	DESCRIPTION
1	1589-1	1	Winch Mount Plate
2	1589-5	2	Side Mount Plate
3	1589-200	2	Offset Bracket
4	1589-100	1	Oil Cooler Bracket
5	HDW1054	2	8mm x 25mm Hex Bolt
6	HDW2100	4	3/8 x 1 Hex Bolt
7	HDW7061	4	3/8 Nylock Nut

1. Unplug the headlights and remove the oil cooler from bumper (keep bolts). Remove the bumper and keep bolts. Remove oil lines from the cooler for relocation. Install winch to winch mount with hardware provided. (Cable should come off the bottom of spool.)
2. Install winch mount to the frame at the bumper mounting locations. Use the bumper bolts previously removed to re-install mount. Bolts should go through side mount plate, then the winch mount, and finally into the bumper mounting tabs on frame. (In the top location you will also have the oil cooler mounting on the outside.) Once in place, reinstall the oil lines on opposite side from original (the lines will cross each other).
3. Install bumper to mount plate using the 3/8" x 1" hex bolts and nylock nuts provided. Install the small offset brackets between the top bumper mounts and the frame tabs using the original bolts and the 8mm x 25mm hex bolts provided. Hook up the headlights. Install the fairlead with bolts provided with winch and wire to their instructions.

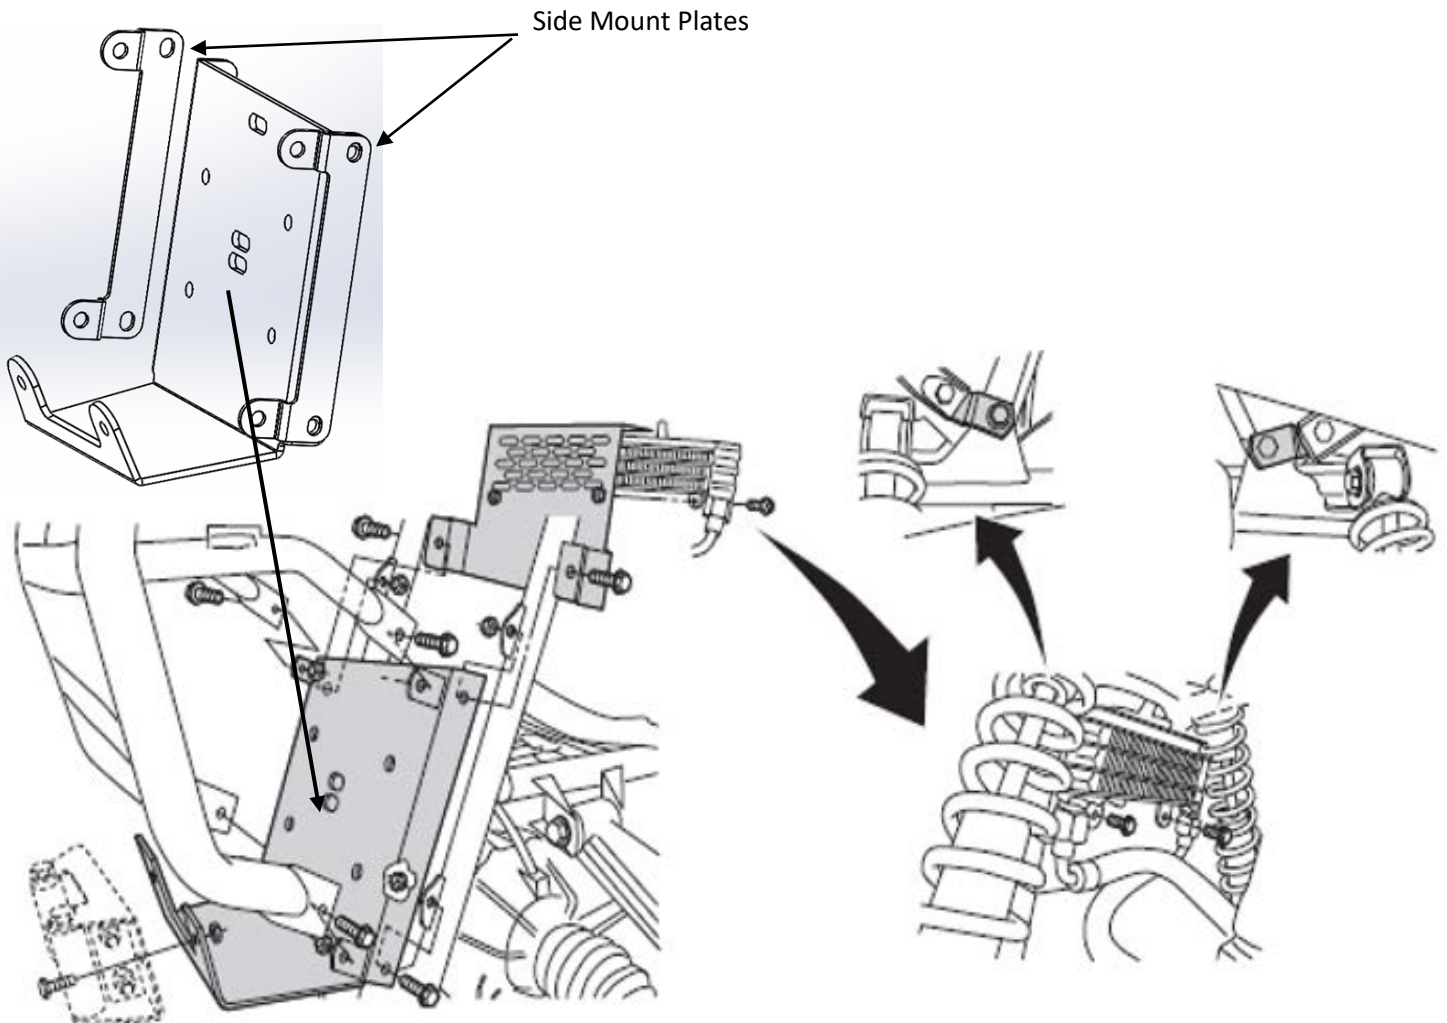

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).

INST1589PF