



PART# 4505-0668

ITEM	PART#	QTY.	DESCRIPTION
1	1596-1	1	Winch Mount Plate

NOTE: Fairlead is not included with this kit.

Winch Mount Installation Instructions

for Arctic Cat '04 650 Automatic 4x4, '05 500 4x4 2-up, '02-'04 500 Manual 4x4, '02 500i Manual & Automatic 4x4, '04 500 Automatic TRV 4x4, '02-'04 500 Automatic TBX 4x4, '02-'04 500 Automatic, '05 400i Automatic 4x4, '04 400 Manual ACT MRP 4x4, '03-'05 400 Automatic 4x4, '03-'04 400 Manual & Automatic ACT 4x4, '02 400/400i Manual 4x4, '02 375 Automatic 4x4, '04-'05 300 Manual MRP 4x4, '02-'05 300 Manual 4x4


Remove the wire mesh grill from the center of the front bumper and retain the bolts.

Attach the winch mount plate to this location using the bolts you retained.

You may now install your fairlead using the hardware from the winch manufacturer.

Next place winch on the inside (the winch will go upside down) and bolt to the top shelf on the winch mount. Use hardware provided by winch manufacturer to bolt winch. Feed the cable or rope through the fairlead.

Wire to winch manufacturer's instructions.

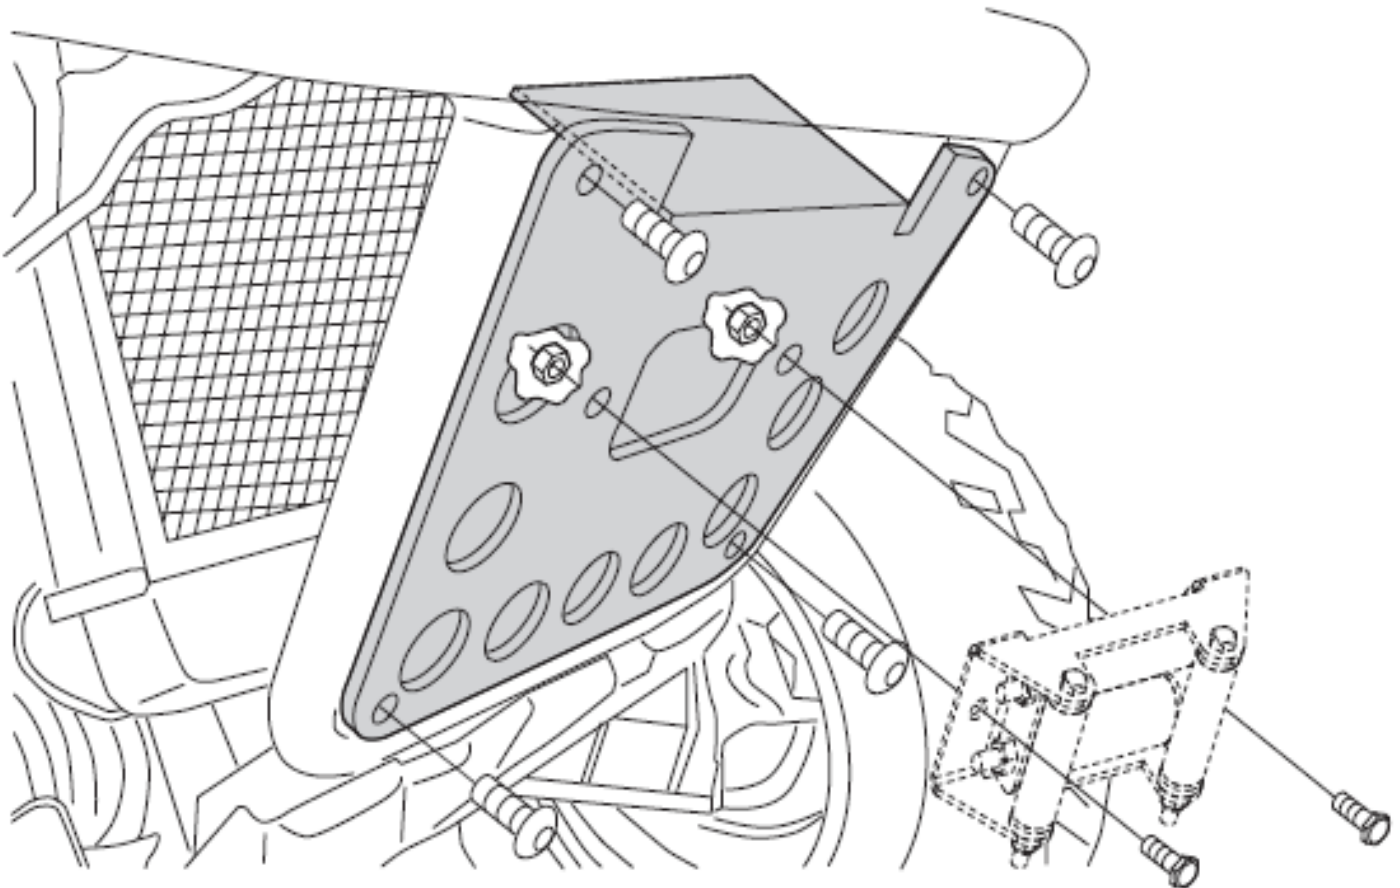

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).

INST1596PF