



PART# 4505-0669

ITEM	PART#	QTY.	DESCRIPTION
1	1599-1	1	Main Winch Mount Plate
2	1591-2	1	Fairlead Plate
3	HDW2051	2	5/16 x 1 Hex Bolt
4	HDW9002	4	5/16 Flat Washer
5	HDW2002	6	1/4 x 1 Hex Bolt
6	HDW9012	6	1/4 Flat Washer
7	HDW7050	6	1/4 Nylock Nut


Winch Mount Installation Instructions

for Polaris 96-03 500 Sportsman 4x4, 00-08 500 Sportsman 6x6, 99-00 500 Magnum 4x4, 97 500 Xplorer 4x4, 04-05 500 ATP H.O., 00 425 Xpedition 4x4, 01-03 400 Sportsman 4x4, 95-02 400L Xplorer 4x4, 98-00 335 Sportsman 4x4, 04-05 330 ATP, 03-06 330 Magnum 4x4, 00-02 325 Magnum 4x4, 96-99 300 Xplorer 4x4, 99-00 Diesel 4x4

NOTE: On the 300 air-cooled models use the six 1/4" x 1" bolts and nylock nuts in the holes on the side of the grill. (This can also be done on the liquid cooled models as an option.)

1. Temporarily remove the two bolts (per side) that hold the upper radiator protectors and the three screws down the side.
2. Install the winch mount plate on the front of the grill using the 5/16" x 1" hex bolts and washers in the top bolt location. These holes should be threaded already. Next reinstall the screws that were removed from the plastic side shrouds.
3. Install winch onto plate using hardware provided with winch making sure the fairlead plate is between winch and mount. Mount fairlead with hardware provided with winch.
4. Wire winch to winch manufacturer's instructions.

NOTE: Roller fairlead not included with this kit!

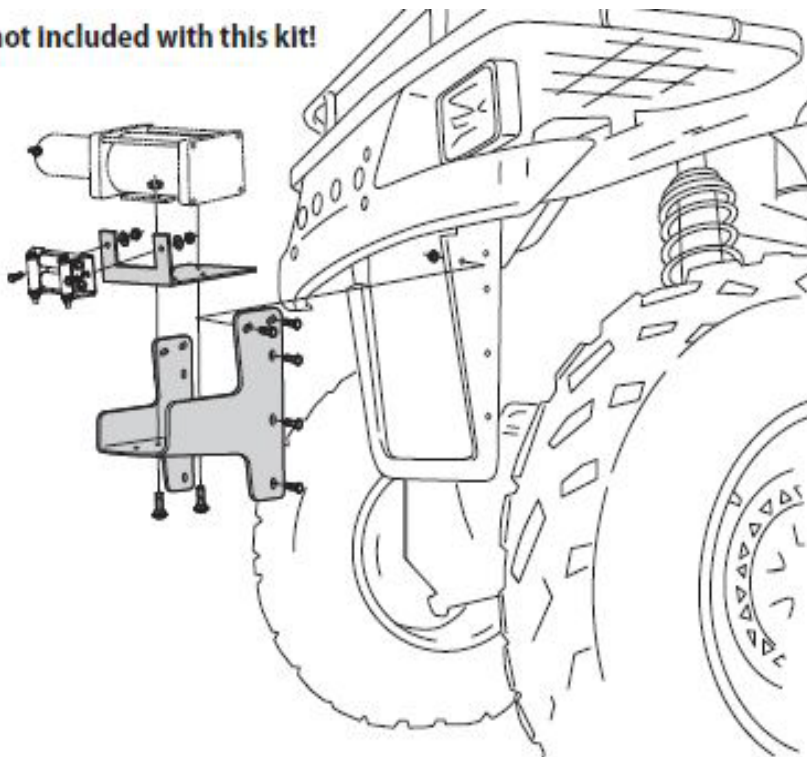

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).