




PART NUMBER 4505-0691

## WINCH MOUNT INSTALLATION INSTRUCTIONS

YAMAHA WOLVERINE 700

1	1617-1	Mount Plate
1	1617-3	Mounting Strap
4	HDW2050	5/16 x 3/4 Hex Bolt
2	HDW2051	5/16 x 1 Hex Bolt
4	HDW7056	5/16 Serrated Flange Nut
2	HDW7058	5/16-18 Nylock Nut
6	HDW9002	5/16 SAE Flat Washer
1	INST1617	Instruction Sheet

1. Remove front skid pan.
2. Place support bar in frame channel just in front of radiator. Place two 5/16" x 1" hex bolts down through support bar and channel. Place angle support to bottom of channel with slotted holes facing up. Attach with the bolts you just placed in with two of the 5/16" nylock nuts. Make sure angle bracket is flush with channel in front.

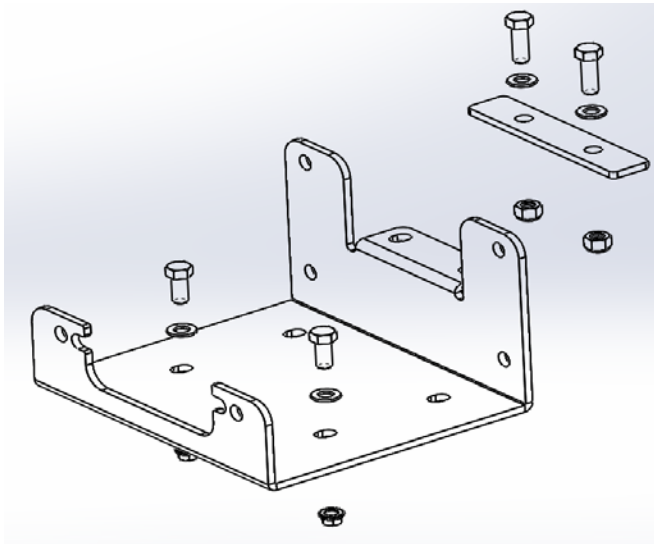

3. Place winch mount in place as illustrated. Attach to angle bracket with two 5/16" x 3/4" hex bolts and wiz nuts, attaching to front cross support. (If bolting winch on this flat surface, the winch bolts will secure winch mount in this location.)

Some winches will attach to the back portion of the mount and, if so, you will use the 5/16" x 3/4" hex bolts to secure mount to the front cross support.



Back tab will go under the channel at this location. The mount strap will go on top in the channel.

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (7:00 to 4:30 CST Monday through Thursday).

INST1617PF