




Motion Pro, Inc.
867 American Street
San Carlos, CA 94070
Tel 650.594.9600 Fax 650.594.9610
www.motionpro.com

INSTRUCTIONS

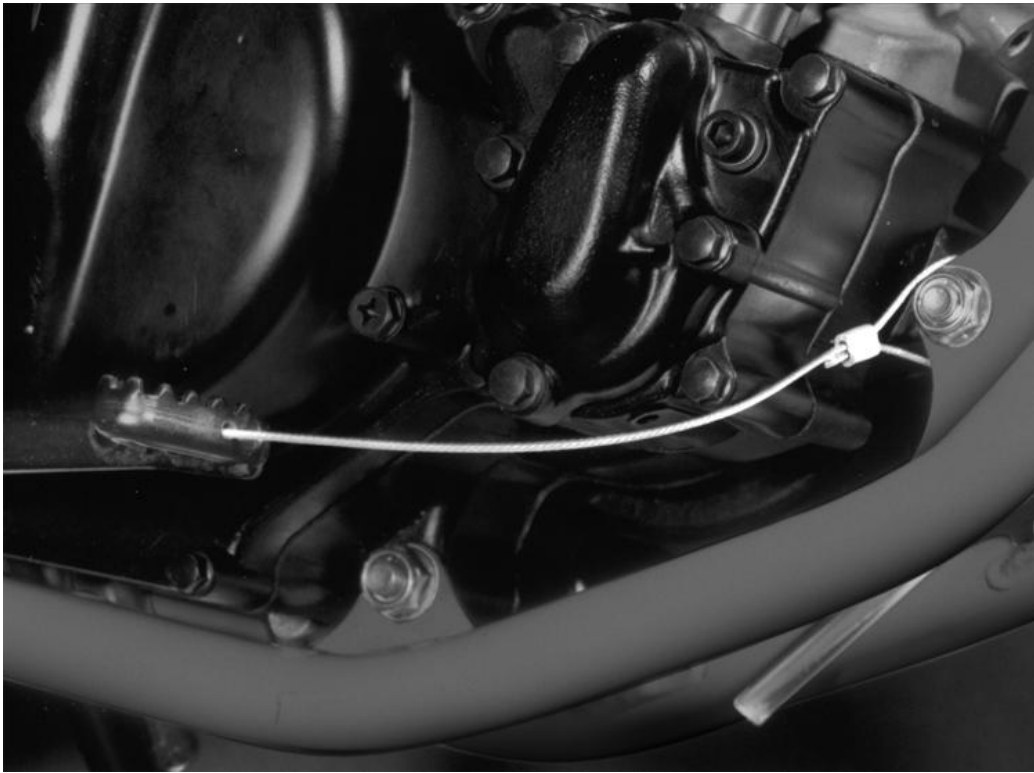

MOTION PRO PEDAL ANCHOR KIT 11-0008

DIRECTIONS TO INSTALL

- 1 - Drill 1/16" hole in front, outside, part of brake pedal or shift lever.
- 2 - Thread cable up through hole in pedal until soldered end pulls up against pedal.
- 3 - Slide tubing over cable.
- 4 - Slide special crimp fitting onto cable.
- 5 - Find suitable location forward of the pedal on frame tube, motor mount, or pipe bracket for other end of cable. Loop cable around mount (you may have to drill additional 1/8" hole) and back through crimp fitting.
- 6 - Move pedal throughout complete travel making sure that cable does not impede movement. Use vise grips or suitable pliers and squeeze crimp fitting onto cable.