



Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing these Backrest Side Plates for a customer, please give them this manual. It contains information needed to properly maintain and use this product.



Attention:

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.




Note:

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

CONTENTS OF KIT-P9BR500


Item	Description	Part No.	Qty.	Notes and Tools
1	Side Plate Backrest Assy., Left	37-371148-000	1	
2	Side Plate, Backrest Assy., Right	37-371149-000	1	
3	Eyebrow Plate, Left	80-890010-000	1	
4	Eyebrow Plate, Right	80-890011-000	1	
BAG#203				
5	Spacer, Rear	34-342916-000	2	
6	Spacer, Front	34-342800-000	2	
7	Spool, Rear with Cushion Installed	34-340519-000	2	
8	Spool Front	34-340518-000	2	
9	Cover, Rear Spool	34-340506-010	2	
10	Screw, Button Head M8 x 45	51-516445-000	4	6mm Hex Wrench
11	Nut, Cap, NOT SHOWN	42-483020-000	4	NOTE, used when installing Back Rest or luggage rack. NOT SHOWN

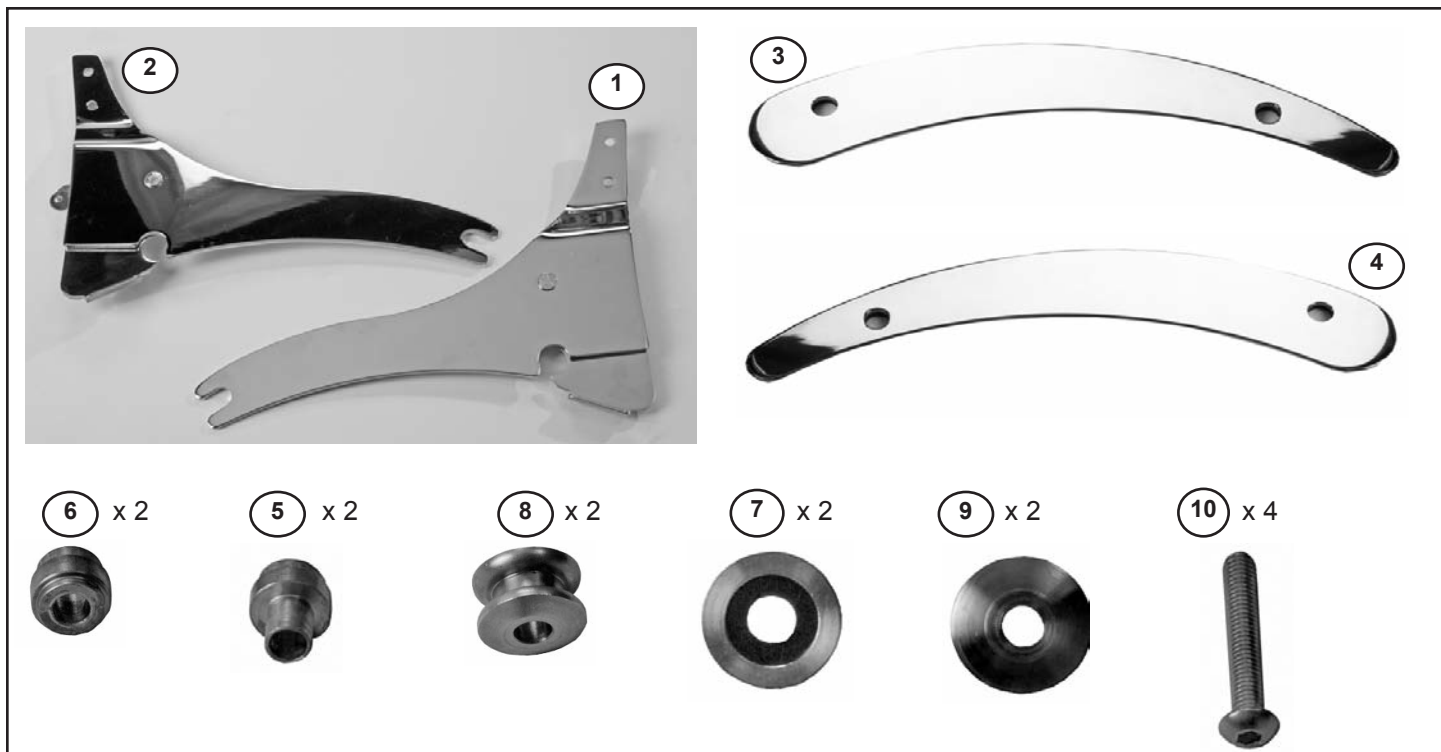

National Cycle QuickSet 3® Rack is covered by US patent 6484914.

National Cycle, Inc. PO Box 158 Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / www.nationalcycle.com / e-mail: info@nationalcycle.com



Hex Key Wrench, 5mm
Hex Key Wrench, 6mm
Hex Key Wrench, 8mm



Right and Left side of Motorcycle is determined while sitting on the bike.



*Apply a coat of high quality polish or wax to the chrome side plates before assembly.



*This will keep latches gliding smoothly onto guide washers.

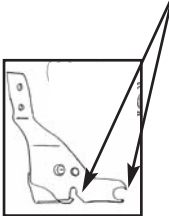


Figure 1

PREPARATION

1. Place motorcycle securely on its side stand.
2. Remove the two fender strut screws and washers from one side of the motorcycle. This hardware will not be reused. **(6mm Hex Wrench) Figure 1**

INSTALLATION

1. Select the Right side Eyebrow Plate (4) from Kit.
2. Prepare Front and Rear Hardware Assemblies as shown in **Figure 2**.

Rear Assembly

- Screw (10)
- Cover (9)
- Rear Spool (7) with Black Cushion installed from factory
- Rear Spacer (5)

Front Assembly

- Screw (10)
- Front Spool (8)
- Front Spacer (6)



Figure 2



Figure 3



Figure 4

3. Install the Eyebrow Plate (4) to the Right fender using the Front and Rear Hardware Assemblies.

(6mm Hex Wrench) Figure 3 and 4

4. Repeat procedure on Left side of motorcycle.

5. Tighten the 4, M8 x 45 Screws (10) to 18 ft/lbs (216 in/lbs), (24 N-m). **(Hex Key, 6mm) Figure 3 and 4**

6. Side Plate (1) and (2) installation is completed when installing the Backrest P9800A or Luggage Rack P9900 components.

MAINTENANCE


The high quality chrome finish of your Paladin rack assembly can be maintained with any quality chrome cleaner and or polish.

Using the QuickSet 3® feature to remove your Paladin System.

Check that QuickSet 3 is unlocked. Stand at the rear of the motorcycle and grab ahold of the system at the side plates. Lift up on the QuickSet 3 lever while rotating the system up and pull back and out of the forward guide washer.

For re-installation, first make sure the QuickSet 3 feature is unlocked. Holding the system as you do in removal, guide the side plate into the forward guide washer. Make sure you fully seat the notch of the side plate into the washer. Lift the Quickset 3 lever and guide the rear notch in the side plate back onto the rear guide washer.

When mounting the luggage rack or backrest assembly, listen for the audible "click" indicating that the latches are in place and side plate is completely seated onto guide washers.

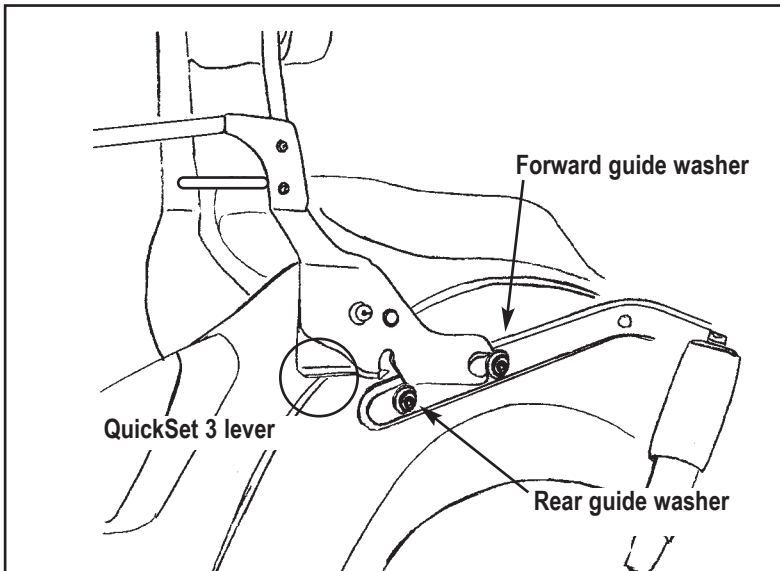

WARNING

Maximum load for the Luggage Rack is 5 Kg (11 lbs).

When mounting the Backrest assembly, listen for the audible "click" indicating that the latches are in place. Always lock the QuickSet 3® Side Mount Plate before using your motorcycle. This insures the utmost in safety.

Never ride your motorcycle with loose accessory mounting hardware. Check the hardware for tightness regularly.

Today's motorcycles are built with enough frame rigidity to withstand the moderate loads imposed on them by the foreseeable addition of an accessory. If the accessory(ies) adversely affects your motorcycle's stability, immediately remove the accessory(ies). Do not ride a motorcycle that exhibits unsafe handling traits.

Have experienced service personnel correct any problem before riding with the accessory(ies) installed. For further questions concerning handling problems associated with an accessory(ies), contact your dealer, motorcycle manufacturer, or accessory manufacturer.

National Cycle, Inc. PO Box 158 Maywood, IL 60153-0158 USA

708-343-0400 / Fax: 708-343-0625 / www.nationalcycle.com / e-mail: info@nationalcycle.com