




NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

HONDA GROM

FRONT TURN SIGNALS

- 1 Remove (2) bolts on either side of headlight (picture 1)
- 2 Unplug both connectors on back of headlight
- 3 Remove push pin and bolt underneath headlight and separate the headlight (picture 2/3)
- 4 Remove screw on back of stock signal, pop out metal plate and remove stock blinkers (picture 4)
- 5 Pop rubber grommet out from inside turn signal housing
- 6 Remove single screw on plastic
- 7 Feed connector through plastic housing, line up lenses and screw together (picture 5/6)
- 8 Reassemble brackets onto headlight and reinstall stock hardware
- 9 Plug (2) connectors back into bike behind headlight as well as (2) turn signal connectors

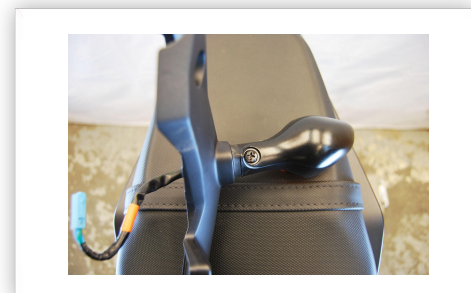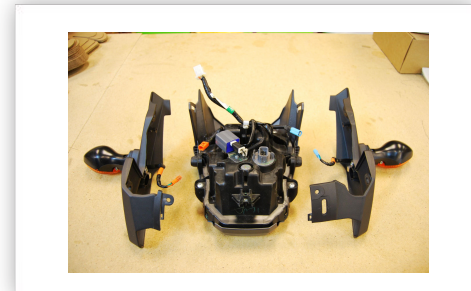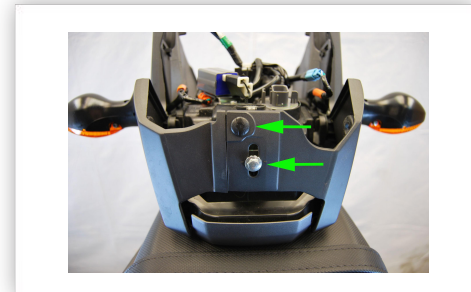

NEW RAGE CYCLES

INSTALLATION INSTRUCTIONS

FRONT TURN SIGNALS

- 10 Test connections and signals prior to mounting headlight back onto bike
- 11 Finish reassembling hardware to mount headlight

