

Polaris RZR XP Rear Fender Flare Kit 62005

Before you begin, read these instructions and check to be sure all parts and tools are accounted for.

Kit Components:

Qty.	Part Description	Tools required for installation:
1	Rear Fender Flares (pair)	4mm Allen
18	Pan Head Screw M6x15mm	1/4" Drill Bit
18	6mm Flange Nut	Phillips Screwdriver
		10mm Wrench



Fitment: 60" models

2015 – 2020 RZR 900 (60" models)

2016 – 2020 RZR XP 1000 (60" models)


2015 – 2018 RZR 4 900

2019 - 2020 RZR S 4 1000

INSTALLATION INSTRUCTIONS – Rear Passenger Side

NOTE: Reference illustration for holes and panels. The assembly is in alpha-numeric order.

1. Secure vehicle!
2. Holding panel A in place, making sure the outer edge of the fender aligns with the raised edge of the fender flare. Mark and drill hole A1 using a 1/4" drill bit. Insert a pan head screw and flange nut and lightly tighten! **(See Photo 1)**
3. Holding panel A in place, making sure the edge of the fender lines up with the raised edge of the fender flare. Mark and drill hole A2 and A3 using a 1/4" drill bit. Insert a pan head screw and flange nut and lightly tighten!
4. Hold panel B in place, making sure the edge of the fender matches up with the raised edge of the fender flare. Mark and drill hole B1 using a 1/4" drill bit. Insert a pan head screw and flange nut and lightly tighten! **(See Photo 2)**
5. Holding panel B in place, making sure the edge of the fender lines up with the raised edge of the fender flare. Mark and drill hole B2 and B3 using a 1/4" drill bit. Insert a pan head screw and flange nut and lightly tighten!
6. Holding panel C in place, making sure the edge of the fender lines up with the raised edge of the fender flare. Mark and drill hole C1 using a 1/4" drill bit. Insert a pan head screw and flange nut into each and lightly tighten! **(See Photo 3)**
7. Holding panel C in place, making sure the edge of the fender lines up with the raised edge of the fender flare. Mark and drill hole C2 and C3 using a 1/4" drill bit. Insert a pan head screw and flange nut and tighten lightly.
8. Make sure all edges are lined up correctly and tighten all fasteners.
9. Repeat these instructions for the opposite side.

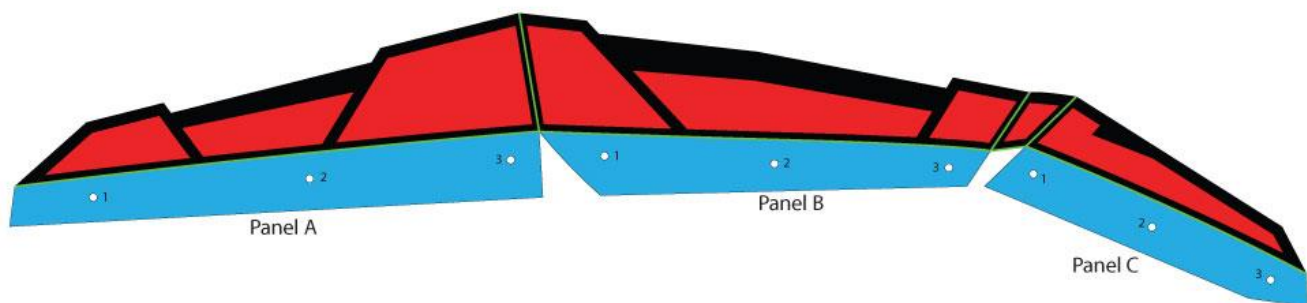

- - Layer 3 = .08"
- - Layer 2 = .25"
- - Layer 1 = .15"
- - Crease = .08"
- Radius on layer 1 = .125"

Polaris RZR XP Rear Fender Flare Kit 62005



Photo 1



Photo 2



Photo 3

LIMITED WARRANTY

PowerMadd guarantees its products against defects in material and workmanship for a period of twelve (12) months from the original date of purchase. **POWERMADD** shall not be liable for damage or injury caused by defective materials or workmanship. **POWERMADD** may elect to repair or replace this product but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.