



Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Kit Components:

| Qty. | Part Description |
|------|-----------------------------------|
| 1 | Folding Windshield |
| 1 | Instruction Sheet |
| 1 | Hardware Kit: |
| 4 | Rubber Mount Clamps |
| 4 | ¼-20 x 1" Phillips Pan Head Screw |
| 4 | ¼ Flat Washers |
| 4 | ¼-20 Nylock Nut |
| 2 | Adhesive Catch Puck |

Tools required for installation:

#3 Phillips screw driver
7/16" Wrench

Approximate Installation Time: 15 Minutes

INSTALLATION INSTRUCTIONS

1. **Prepare machine.** Make sure vehicle is clean and free of all debris.
2. **Install clamps.** Refer to Fig 1. Place two clamps on the forward most portion of the cab frame tubing. Make sure the flat portion of the clamp is towards the front of the vehicle. (Repeat for opposite side)
3. **Align the windshield.** Place the deflector into position, centered on the front cab frame surface, resting on the hood. Ensure the deflector is properly aligned using the contour as a guide (it should be centered over the matching dash surface contours).
4. **Attach Shield.** Use the ¼-20 screws, washers and ¼-20 nylock nuts to secure the windshield to the Cab frame. Refer to Fig 1. **NOTE:** Torque to 25 in-lbs. Do not over-tighten.
5. **Install pucks.** This step must be done at room temperature in a dry environment. Press each puck on the upper tab of the windshield so that when the shield folds down the adhesive side will make good contact with the hood (as shown in Fig 2). Do not remove the adhesive backer yet, you will need to locate the pucks (side to side) in a position that will keep the shield from contacting the hood. **NOTE:** Every install can vary slightly. It is your responsibility to make sure the pucks are positioned to keep the windshield from damaging the hood. Once a location has been decided on, properly clean the area before removing the adhesive backer and applying the catch puck. Apply constant pressure to the puck for one minute to ensure adhesion. If oil, dirt, or debris is not completely removed from the hood, proper adhesion will not be achieved.

IMPORTANT: You may need to experiment with clamp placement to obtain the desired fit.

NEVER RIDE WITH YOUR FACE/HEAD OVER OR NEAR THE WINDSHIELD.

Maintenance: Periodically check all fasteners for tightness and re-torque as required.

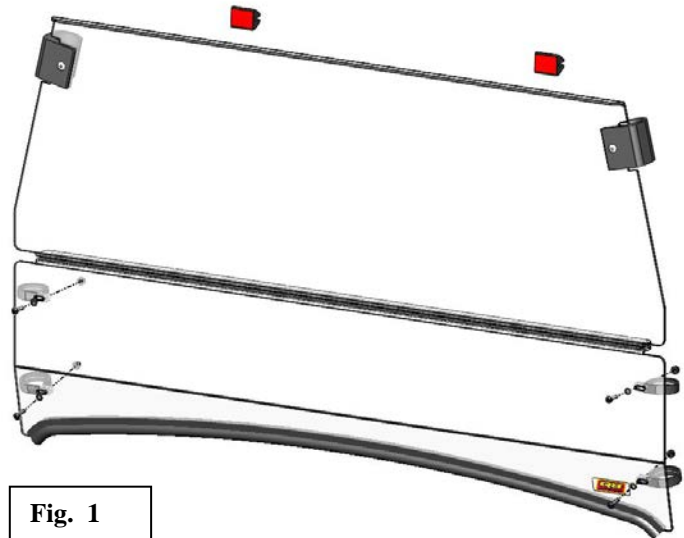


Fig. 1

(Prowler windshield shown
for illustration purposes only)



**UTV Folding Windshield
Installation Instructions**

**Form No:
99554375**

Cleaning:

1. Use an indirect high pressure water supply to rinse the large dirt particles from the windshield.
2. Once the majority of dirt is removed, use warm soapy water and a cotton terry cloth to wash all windshield components.
3. Rinse thoroughly and allow to air dry.
4. Use a quality polish such as Plexus® or Novus II® to clean and remove fine scratches from the windshield.

Trailing:

1. Upper shield must be in the up or locked position.
2. The rubber flex mounts are not designed to handle highway speeds. You must provide auxiliary, strapping or tie downs to hold the windshield in the up position and to keep the shield from deflecting excessively. Be advised, auxiliary tie downs may scratch the windshield, so proper placement is crucial.

