

Copyright © 2021 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-410

HANDLEBAR END WEIGHTS

FITMENT: CAN-AM RYKER 2019-NEWER

1/26/2021

TOOLS NEEDED: T30 TORX


4MM ALLEN WRENCH

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

ESTIMATED INSTALLATION TIME: 15 TO 20 MIN.

INSTALLATION:

1. STARTING ON THE LEFT SIDE OF THE BIKE, USE A T30 TORX TO LOOSEN THE M6 SCREW SECURING THE OEM MIRROR ASSEMBLY (FIG. 1). WHILE LOOSENING THE SCREW, PUSH IN TO RELEASE THE NUT INSIDE THE HANDLEBAR. *NOTE: ONLY LOOSEN THE SCREW ENOUGH TO ALLOW THE MIRROR TO SLIDE OUT OF THE HANDLEBAR.*
2. SLIDE THE MIRROR OUT FROM THE END OF THE HANDLEBAR TO REMOVE IT (FIG. 2).
3. REMOVE THE OEM SCREW COMPLETELY BUT KEEP THE SQUARE NUT IN PLACE INSIDE THE MIRROR MOUNT (FIG. 2). *(THE OEM SCREW WILL NOT BE RE-USED)*
4. INSTALL THE HANDLEBAR END WEIGHT USING THE SUPPLIED M6-100 MM SCREW (FIG. 3). DO NOT TIGHTEN YET.
5. INSTALL THE OEM MIRROR ASSEMBLY AND END WEIGHT ON THE END OF THE HANDLEBAR. TIGHTEN THE SCREW UNTIL THE MIRROR AND END WEIGHT ARE SECURE. **DO NOT OVER TIGHTEN.**
6. REPEAT STEPS 1 THROUGH 5 ON THE RIGHT SIDE.

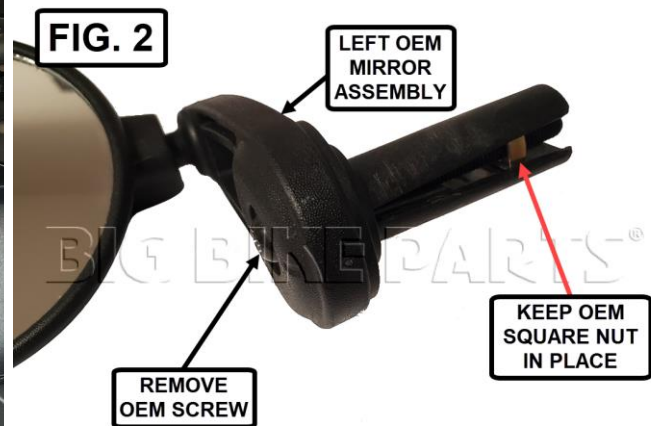

NOTICE

IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

WARNING

ALWAYS MAKE SURE THROTTLE ROTATES AND RETURNS BACK TO IDLE POSITION FREELY BEFORE OPERATING VEHICLE. FAILURE TO DO SO CAN RESULT IN INJURY