




475 SE 12th St
MADISON, SD 57042

1-605-256-3075
www.slydogskis.com

SKI INSTALLATION INSTRUCTIONS

SKI-DOO: 2000+ REV,XP,XM,XS
2017+ GEN4 MXZ, RENEGADE,
GRAND TOURING AND EXPEDITION,
2020+ BACK COUNTRY
LYNX: 2017+
MOUNT KIT: MKTBRP002

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	RD-0273 REV-B	Rubber Dampener	2
2	MHNNYZ 10 1.5 985	METRIC NUT, M10-1.5 NYLOC	2
3	MH88Z 10 130 1.5 931	METRIC BOLT, M10-1.5 X 130MM HEX	2
4	300-3374-125	1.125"x0.390"x0.125" SS Washer	4
5	BSH10MMINNTHK	10MM Thick Inner Bushing RevC	4

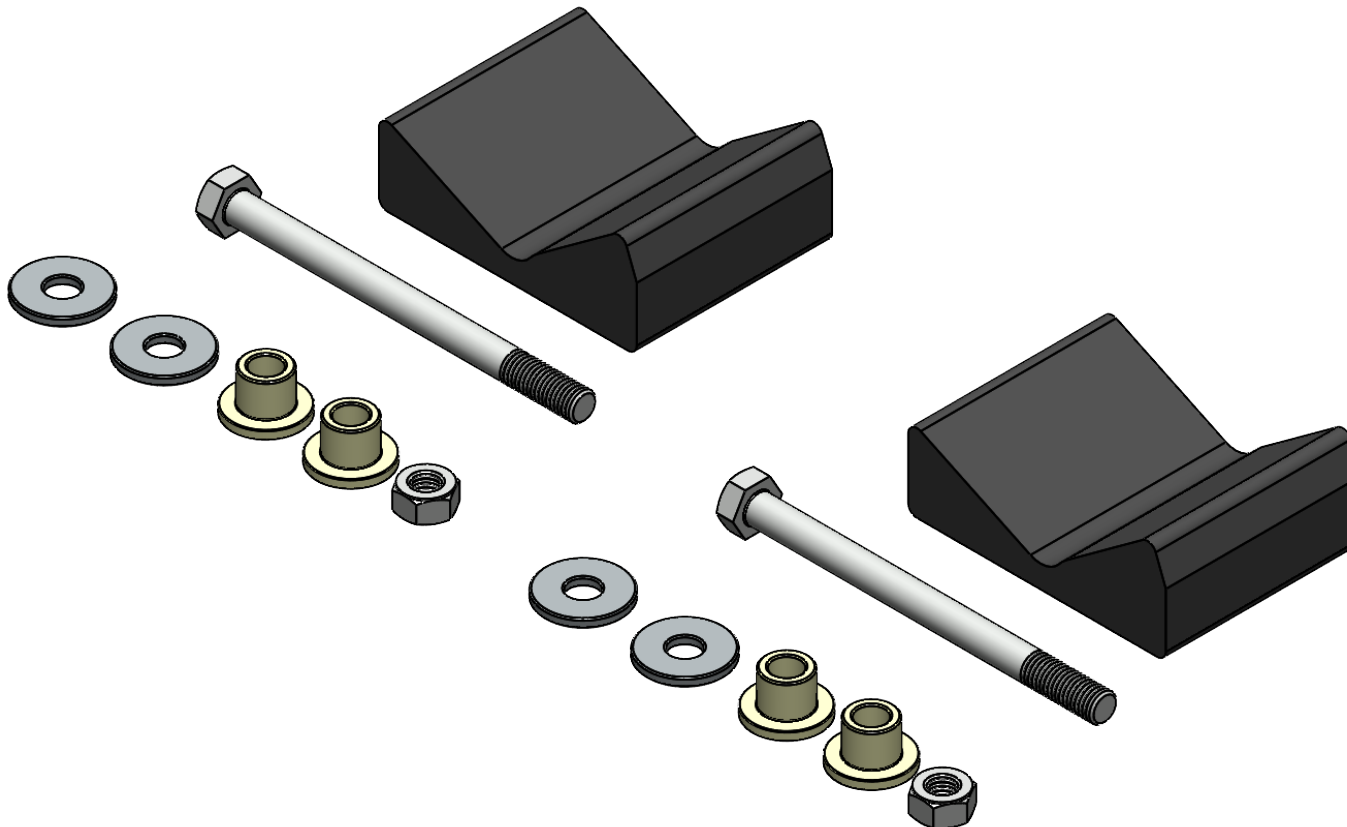



**475 SE 12th St
MADISON, SD 57042**

**1-605-256-3075
www.slydogskis.com**

SKI INSTALLATION INSTRUCTIONS

SKI-DOO: 2000+ REV,XP,XM,XS
2017+ GEN4 MXZ, RENEGADE,
GRAND TOURING AND EXPEDITION,
2020+ BACK COUNTRY
LYNX: 2017+
MOUNT KIT: MKTBRP002

- 1: REMOVE OLD SKIS AND DISCARD OLD HARDWARE.
- 2: INSTALL THE CARBIDES AT THIS TIME.
- 3: INSERT BUSHINGS INSIDE OF THE SKI AND WASHER ON THE OUTSIDE OF THE SKI, THEY FIT VERY TIGHT.
- 4: PLACE RUBBER DAMPENER ON THE SKIS.
(SEE DETAIL VIEW 1 FOR DAMPENER ORIENTATION)

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	RD-0273 REV-B	Rubber Dampener	1
2	300-3374-125	1.125"x0.390"x0.125" SS Washer	2
3	MH88Z 10 130 1.5 931	METRIC BOLT, M10-1.5 X 130MM HEX	1
4	MHNXYZ 10 1.5 985	METRIC NUT, M10-1.5 NYLOC	1
5	BSH10MMINNTHK	10MM Thick Inner Bushing RevC	2

- 5: USE REMAINING HARDWARE TO SECURE THE SKIS. (SEE DIAGRAM)

