




475 SE 12th St
MADISON, SD 57042

1-605-256-3075
www.slydogskis.com

SKI INSTALLATION INSTRUCTIONS

POLARIS: IQR, FUSION, IQ 2005 &
NEWER
MOUNT KIT: MKTPOL002

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	RD-0266	Rubber Dampener	2
2	HNNY5Z 038 16	NUT, 3/8"-16 NYLOC	2
3	110120358	BOLT, 3/8"-16 X 5" HEX	2
4	300-3374-125	1.125"x0.390"x0.125" SS Washer	4
5	BSH375INN	3/8" Inner Bushing RevC	4

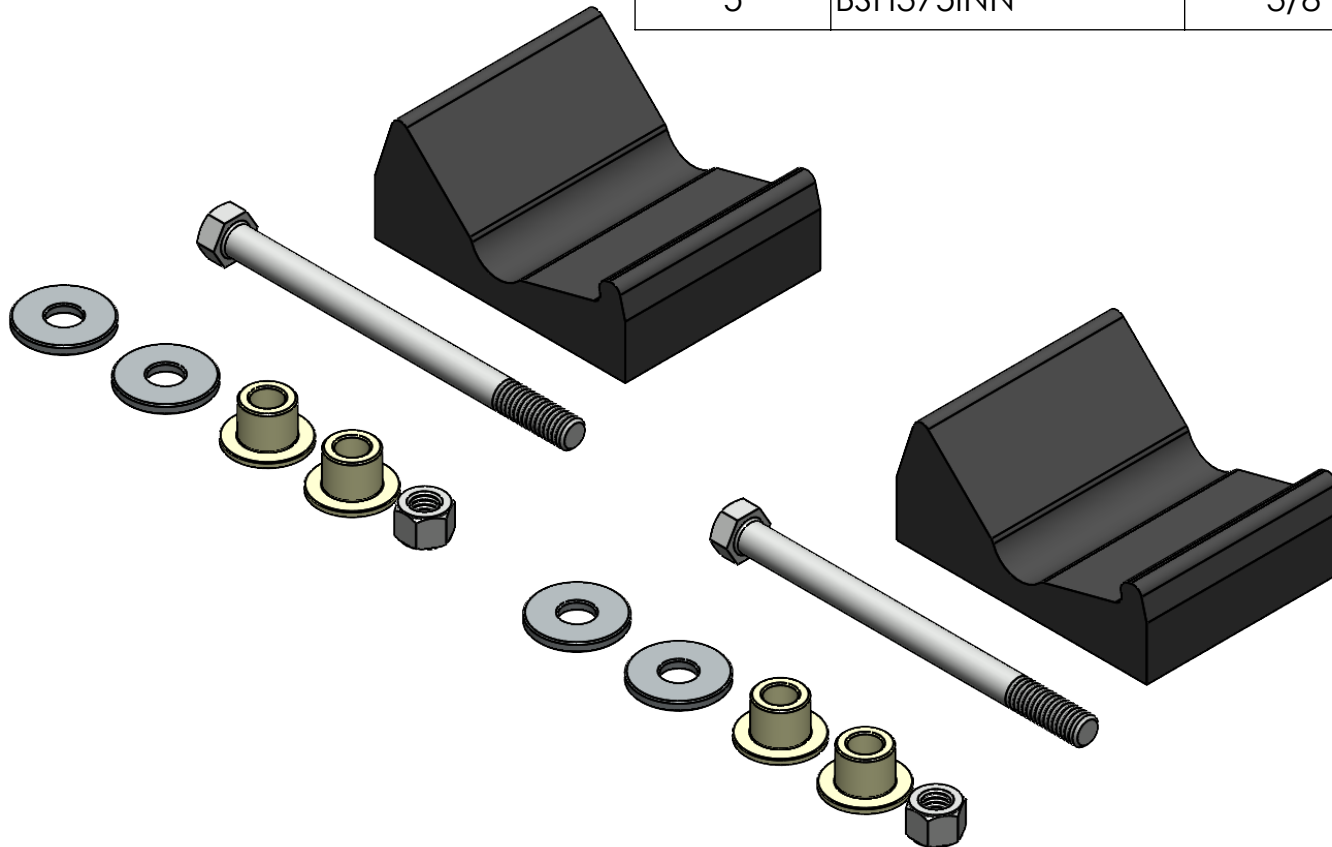



475 SE 12th St
MADISON, SD 57042


1-605-256-3075
www.slydogskis.com

SKI INSTALLATION INSTRUCTIONS

POLARIS: IQR, FUSION, IQ 2005 &
NEWER
MOUNT KIT: MKTPOL002

- 1: REMOVE OLD SKIS AND DISCARD OLD HARDWARE.
- 2: INSTALL THE CARBIDES AT THIS TIME.
- 3: INSERT BUSHINGS INSIDE OF THE SKI AND WASHER ON THE OUTSIDE OF THE SKI, THEY FIT VERY TIGHT.
- 4: PLACE RUBBER DAMPENER ON THE SKIS.
(SEE DETAIL VIEW 1 FOR DAMPENER ORIENTATION)
- 5: USE REMAINING HARDWARE TO SECURE THE SKIS. (SEE DIAGRAM)

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	RD-0266	Rubber Dampener	1
2	300-3374-125	1.125"x0.390"x0.125" SS Washer	2
3	HNNY5Z 038 16	NUT, 3/8"-16 NYLOC	1
4	110120358	BOLT, 3/8"-16 X 5" HEX	1
5	BSH375INN	3/8" Inner Bushing RevC	2

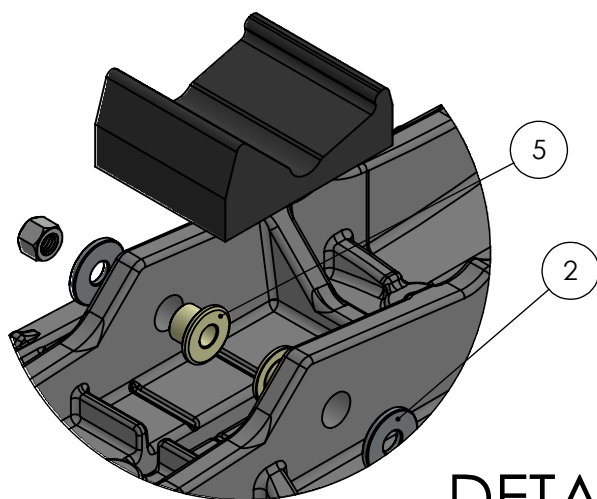

DETAIL 1

