




475 SE 12th St
MADISON, SD 57042

1-605-256-3075
www.slydogskis.com

SKI INSTALLATION INSTRUCTIONS

YAMAHA: 2010 & OLDER APEX, ATTAK,
VECTOR & RX-1
AND ALL TRAILING ARMS MODELS
MOUNT KIT: MKTYAM002

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	RD-0218	Slydog	2
2	MHNNYZ 10 1.5 985	METRIC NUT, M10-1.5 NYLOC	2
3	MH88Z 10 130 1.5 931	METRIC BOLT, M10-1.5 X 130MM HEX	2
4	300-3374-125	1.125"x0.390"x0.125" SS Washer	4
5	BSH10MMINN	10MM Thin Inner Bushing RevC	4
6	SAB10MM001	10MM Phazer Axle Spindle	2

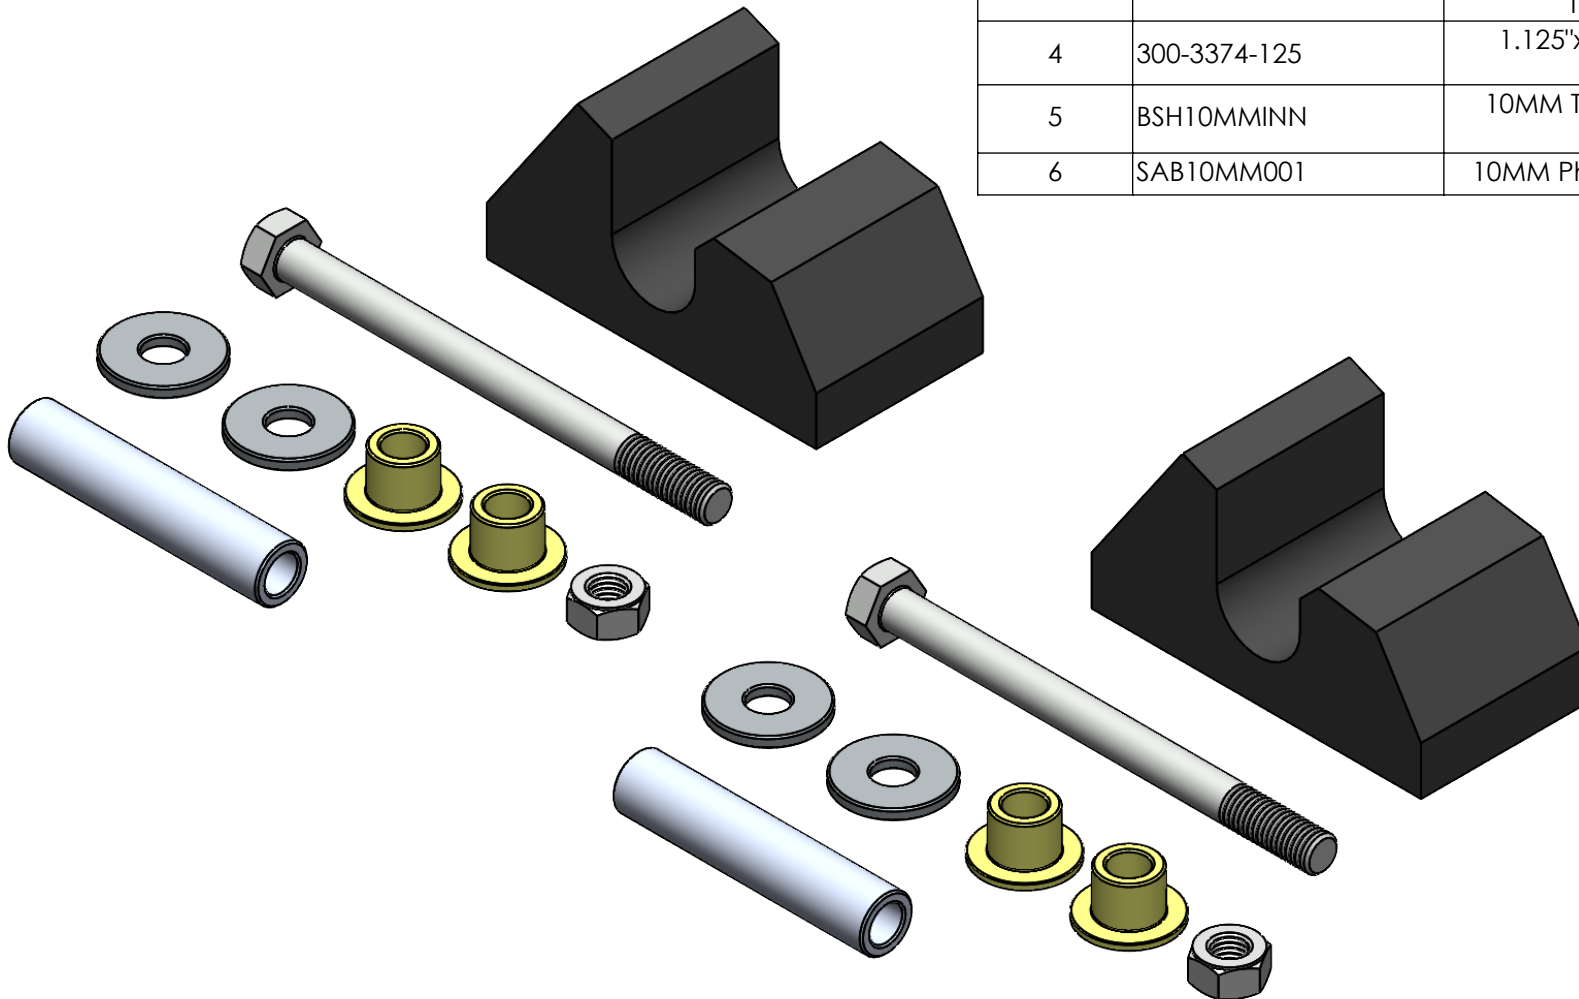



475 SE 12th St
MADISON, SD 57042

1-605-256-3075
www.slydogskis.com

SKI INSTALLATION INSTRUCTIONS

YAMAHA: 2010 & OLDER APEX, ATTACK,
VECTOR & RX-1
AND ALL TRAILING ARMS MODELS
MOUNT KIT: MKTYAM002

- 1: REMOVE OLD SKIS AND DISCARD OLD HARDWARE.
- 2: INSTALL THE CARBIDES AT THIS TIME.
- 3: INSERT BUSHINGS INSIDE OF THE SKI AND WASHER ON THE OUTSIDE OF THE SKI, THEY FIT VERY TIGHT.
- 4: PLACE RUBBER DAMPENER ON THE SKIS.
(SEE DETAIL VIEW 1 FOR DAMPENER ORIENTATION)
- 5: USE REMAINING HARDWARE TO SECURE THE SKIS. (SEE DIAGRAM)

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	300-3374-125	1.125"x0.390"x0.125" SS Washer	4
2	RD-0218	Slydog	2
3	MH88Z 10 130 1.5 931	METRIC BOLT, M10-1.5 X 130MM HEX	2
4	MHNNYZ 10 1.5 985	METRIC NUT, M10-1.5 NYLOC	2
5	BSH10MMINN	10MM Thin Inner Bushing RevC	4
6	SAB10MM001	10MM Phazer Axle Spindle	2

