

# **UNIVERSAL**

# **EARBUD LONG**

---

## **Earbud Installation Instructions**

**UCLEAR<sup>®</sup>**


[www.uclear-digital.com](http://www.uclear-digital.com)

**Congratulations on your new **UCLEAR** earbud purchase! Please refer to the following instructions to install them into your helmet.**

**Note:** These instructions refer to installation in a helmet. You may also install the earbuds in a baseball cap, another type of hat, or even a do-rag with a bit of creativity - connect your world.

**Step 1:** Choose a pair of the included earbud tips which feel most comfortable in your ear.

**Step 2:** Place your helmet open side up so that the **UCLEAR** unit is on your left hand side. If you were to put the helmet on now, it would be facing the correct way. The earbuds will actually mount underneath the sweat band liner of your helmet as indicated by the 2 red circles on the illustration. Refer to Figure 2.2

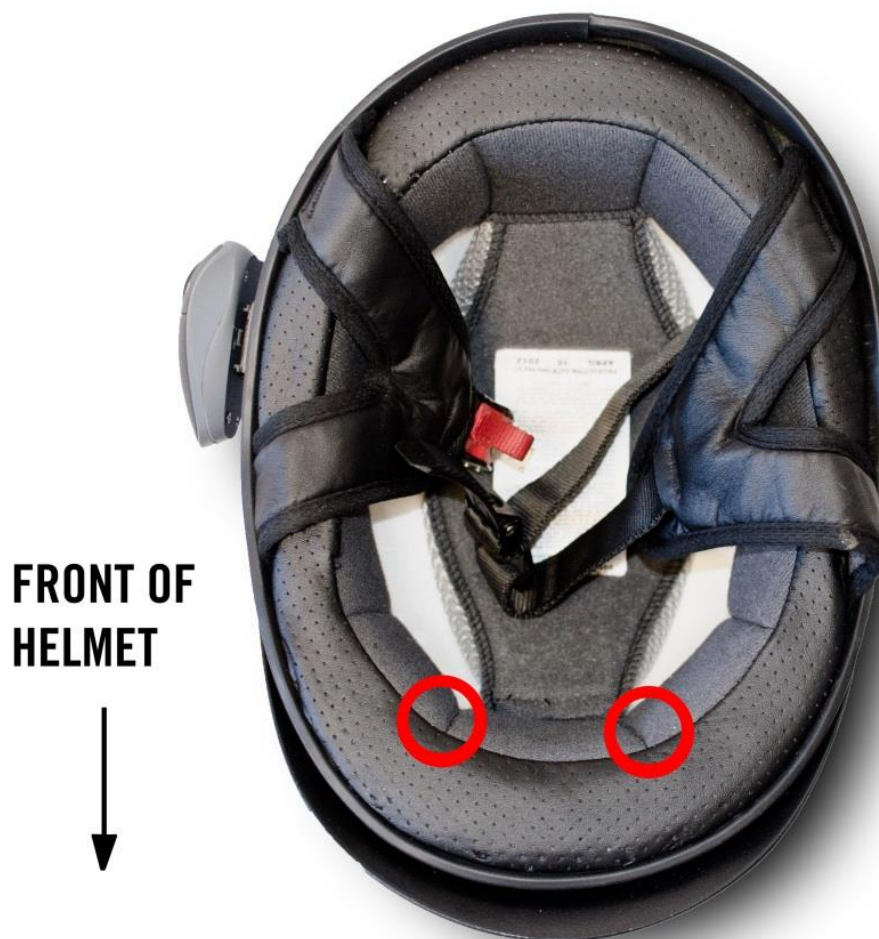

**Figure 2.2**

**UCLEAR®**

[www.uclear-digital.com](http://www.uclear-digital.com)

**Step 3:** Take the earbuds in your hand and pay special attention to the markings. The buds will be marked with an “L” and an “R” for left and right sides, respectively. This is crucial for proper installation since the right side is longer than the left. Refer to Figure 2.3



**Figure 2.3**

**Step 4:** Find the microphone on either side of the earbuds. The microphone is small and rectangular in shape, located about 8 inches from the actual earbud. There will be one for each ear. Refer to Figure 2.4



**Figure 2.4**

**U**CLEAR®


[www.uclear-digital.com](http://www.uclear-digital.com)

**Step 5:** Locate the oblong Velcro pieces in the earbud packaging. There will be (4) sets of Velcro. Peel the white backing off the female pieces of Velcro and place in the helmet behind the sweat liner, above where your forehead will rest in the helmet. These pieces need to be 5.5 inches apart from each other to achieve maximum product performance. Please also note that you should leave about a 1 inch gap between the edge of the helmet and the bottom part of the female Velcro. Refer to Figure 2.5



**Figure 2.5**

**Step 6:** Place each microphone between the edge of the helmet and the bottom part of the female Velcro. Cover the cord with the male Velcro so that it stays in place. Repeat this step for both microphones. Refer to Figure 2.5 and 2.6

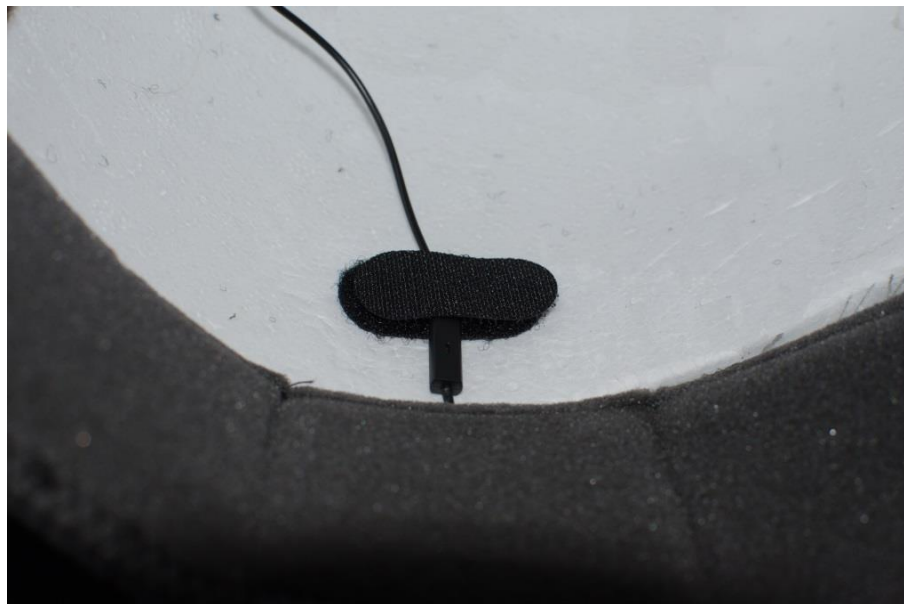

**Figure 2.6**

**U**CLEAR®

[www.uclear-digital.com](http://www.uclear-digital.com)

**Step 7:** After each microphone is installed, route the cords underneath the sweat band of the helmet so that they are all hidden. This will keep all cords out of the way and provide a very clean looking install. If done right, you should see no cords at all. Route each earbud along the side of the liner and then out over the edge or underneath the liner itself. Each helmet and rider preference is different so find a solution that works best for you. To keep the earbud from moving, you may use the two Velcro strips included in the packaging to attach the earbud cord to the “Y” strap on your helmet. Refer to Figure 2.7



**Figure 2.7**

**Step 8:** You have completed the earbud installation. Put these instructions down and get out and ride!

Questions or Comments? Please feel free to contact our customer support at [support@bitwaveusa.com](mailto:support@bitwaveusa.com) or 1-855-BIT-WAVE. Our hours are Monday through Friday 8AM – 5PM MST. For the latest happenings around **UCLEAR**, check out our facebook page: [facebook.com/uclear](https://facebook.com/uclear).

**UCLEAR<sup>®</sup>**

[www.uclear-digital.com](http://www.uclear-digital.com)