


# V3 FRAME SLIDERS KIT 2.0


## KAWASAKI ZX 6 R/RR

year of production: '05-'06


product code: SR123

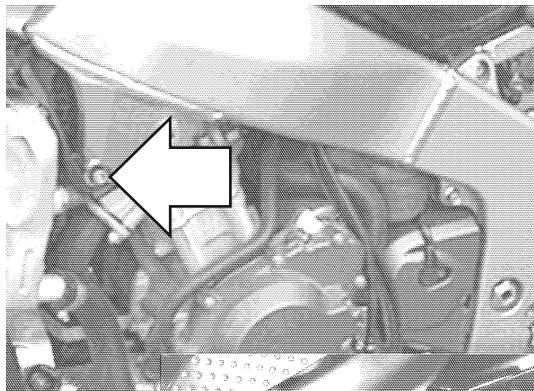


Assembly position (left side)

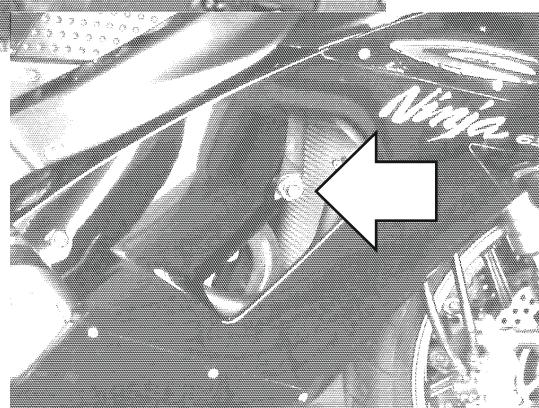

Assembly position (right side)

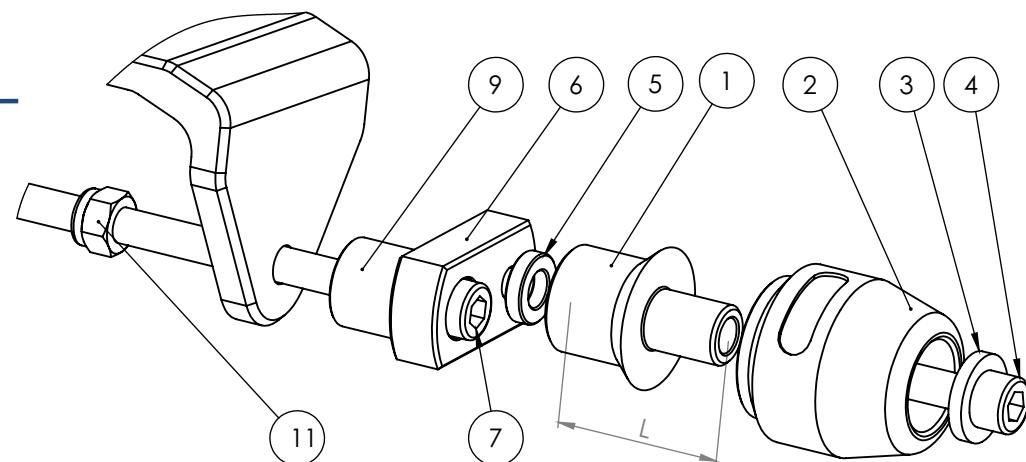

Dimensions of the spacers

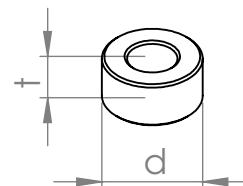

Assembly scheme (both sides)

Part #	Part name	Left side (as You sit on the motorbike)	Right side
1	Slider	1 pcs.	1 pcs.
2	Round cylindrical body	80 mm	40 mm
3	Steel sleeve	1 pcs.	1 pcs.
4	Allen bolt (8,8 class)	M10x100 mm	M10x55mm
5	Spacer	-	-
6	Adapter	Aluminium longer	Aluminium shorter
7	Mounting bolt 1	M10x80	M10x100
8	Mounting bolt 2	-	-
9	Spacer 1	t=20mm, d=15 mm	-
10	Spacer 2	-	-
11	Nut	1 pcs.	1 pcs.
12	Washer	-	-

### Assembly instructions

1. Remove the original bolts indicated with the arrows on the assembly position scheme above.
2. Replace the original bolt by the new mounting bolt (parts #7), the spacer 1 (parts #9) and adapter (part #6) according to the scheme on the right page. Put the adapter (part #6) in the right position according to the drawing on the right page.
3. Assemble the slider, round cylindrical body, the bolt and the steel sleeve (parts #1, #2, #3 and #4) according to the drawing on the right page. Put them into the threaded hole in adapter (part #6).
4. Same operation is required in another side of the motorbike.

We suggest to use the threadlocker (eg. Loctite®) to make sure that the vibrations of the engine do not loosen the bolts.

Legal note. This product is a professional accessory to be used on the race track. Neither manufacturer, nor Seller take responsibility for any damages occurred despite of using protective accessories. For more information go to [vortexracing.com](http://vortexracing.com)