


#### CARBON FIBER TANK PROTECTORS

Part No.	Description	Qty.
Z8502	Tank Protector Alcohol Pack	1 piece 1
Z8503	Tank Protector Alcohol Pack	1 piece 1
Z8504	Tank Protector Alcohol Pack	1 piece 1
Z8505	Tank Protector Alcohol Pack	1 piece 1



Hand Held Hair Dryer, 1500 Watt  
Mild Soap and Water for Cleaning  
Tweezers  
Soft Cloth

#### PREPARATION

1. Clean the motorcycle's surface where the Carbon Fiber pieces are to be placed with mild soap and water.

**NOTE:** Cleaning is critical. Be sure to remove all wax, cleaners, and protectants (Armor-All). These can contaminate the adhesive causing it to fail.

2. Dry area and clean again with the alcohol wipes. *Do not* apply wax or polish to the area cleaned.

#### GENERAL INSTRUCTION

**It's best to read all general instruction, then proceed to specific points pertaining to certain parts on page 2.**

1. Before removing the adhesive mask, familiarize yourself with the fit of the the carbon piece to the area where it will be located.

#### CAUTION

-Do not use a heat gun or open flame to warm the Carbon Fiber piece or the motorcycle, they produce too much heat and may create a fire hazard.

-Warming temperature is critical for the best performance and adhesion. Installing a warm piece onto a cold surface is not recommended.

2. Warm the motorcycles surface where the piece is to be placed to about 100° F (37° C) (hair dryer).

3. Warm the Carbon Fiber piece to 100° F (37° C) (hair dryer).


4. When everything is warm, carefully remove the masking from the adhesive side of the Carbon Fiber piece. (Do one piece at a time) (tweezers).

5. Position the piece in place.

6. If it is necessary to reposition any piece, warm the piece and slowly peel it from the surface. Be careful not to stretch or over bend the piece.

7. Once the pieces are correctly positioned, firmly but carefully, press the pieces onto the warm surface. While still warm, carefully use a soft cloth to press the piece onto the area until it is completely adhered.


9. Avoid contact for 24 hours, the adhesive on the piece will have set completely after that time and it will be permanently installed.

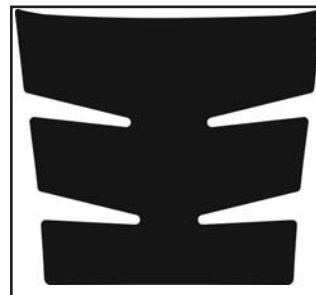


Z8502 R1200 RT  
R1200 R



Z8503  
R1200 ST

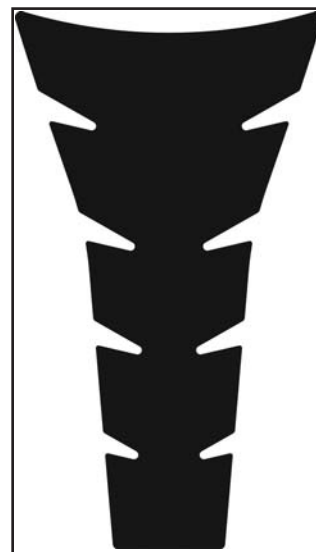

Z8504  
K1200 S

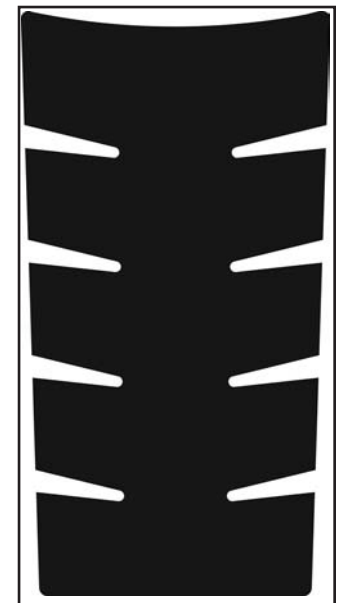


Z8505  
K1200 R

### SPECIFIC POINTS FOR Z8502 R1200 RT



Center Tank Protector and align lower edge to seat with top edge just below separation. Apply as instructed in general installation instruction.

### SPECIFIC POINTS FOR Z8503 R1200 ST

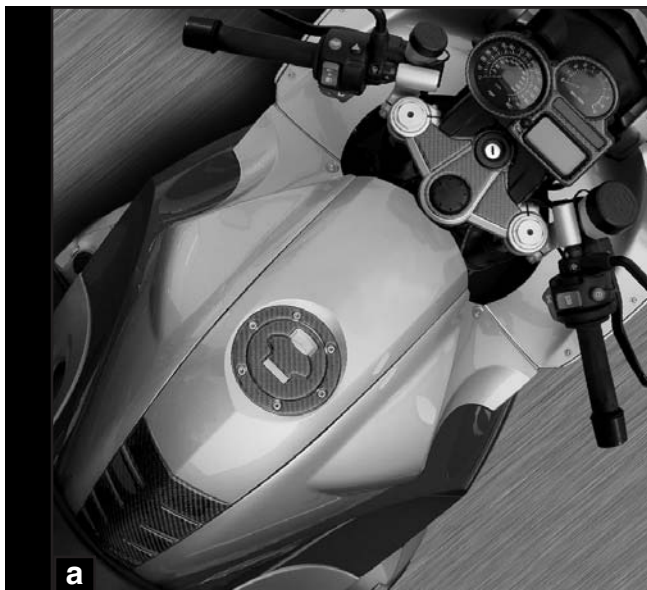


a. Align lower edge of Tank Protector with soft rubber at the seat edge. Center Tank Protector with the style line formed into the motorcycles tank.

### SPECIFIC POINTS FOR Z8504 K1200 S



a. Align lower edge of Tank Protector to the angle formed into the motorcycle's tank.

### SPECIFIC POINTS FOR Z8505 K1200 R

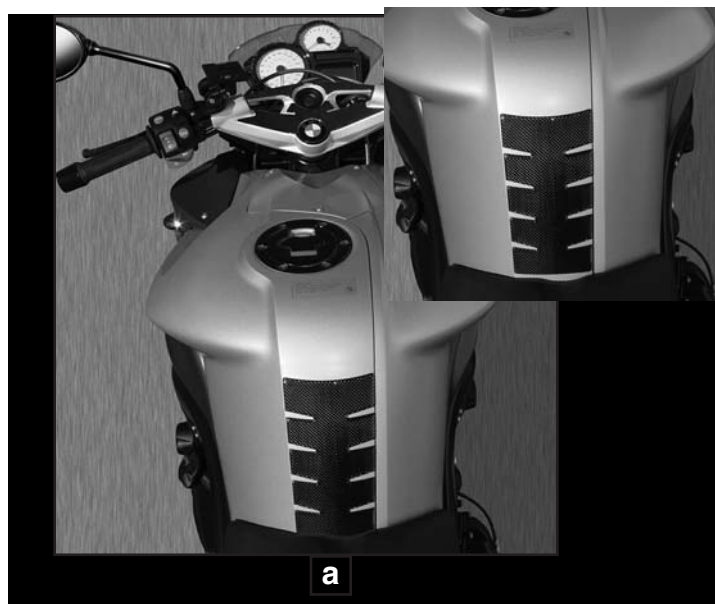

a. Align lower edge of Tank Protector with soft rubber at the seat edge or above. Center Tank Protector with the style line formed into the motorcycles tank.



### MAINTENANCE

Clean and polish the Carbon Fiber Pieces with Turtle Wax® vinyl fabric upholstery cleaner and protector. Spray wax or cleaner on cloth and wipe the carbon fiber covers. Never apply waxes or cleaners directly to the carbon fiber covers.

**ADDITIONAL PARTS:** Fuel Cap Cover for all models, Z8890; complete kits for R1200 ST- Z8305; K1200 S- Z8320; Z8325- K1200 R.



Z8890