

# POWER COMMANDER V

2002-2007 Yamaha TDM900  
Installation Guide

## PARTS LIST



- |                      |                          |
|----------------------|--------------------------|
| 1 POWER COMMANDER V  | 2 DYNOJET DECALS         |
| 1 INSTALLATION GUIDE | 2 POWER COMMANDER DECALS |
| 1 USB CABLE          | 1 ALCOHOL SWAB           |
| 2 VELCRO STRIPS      |                          |


**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**



22-095



# POWER COMMANDER V INPUT ACCESSORY GUIDE

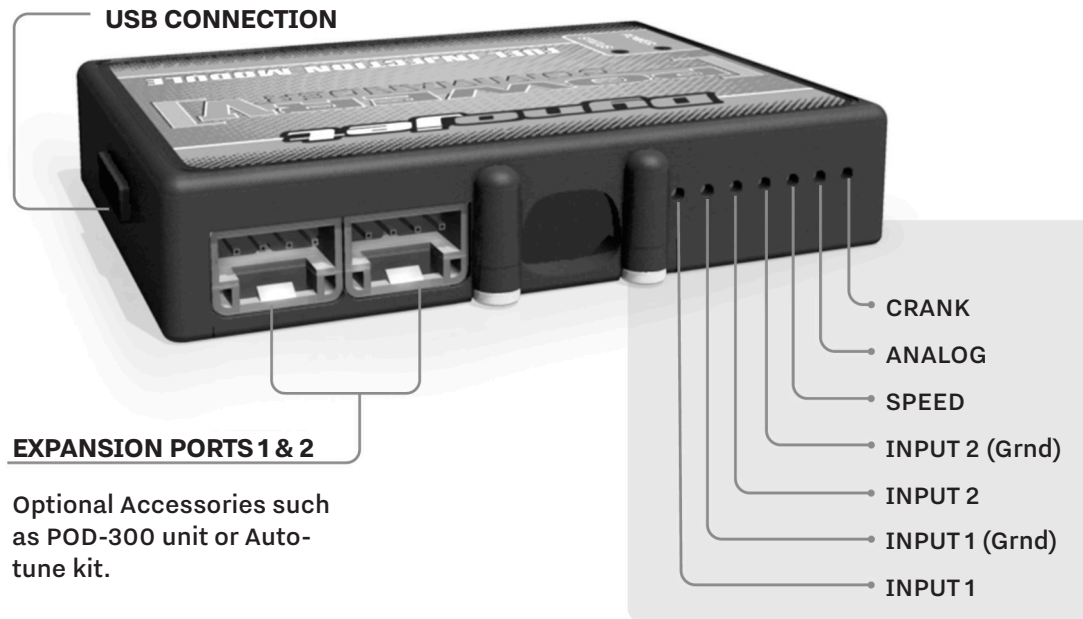


## ACCESSORY INPUTS:

- Map -** (Input 1 or 2) The PCV has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated.
- Shifter-** (Input 1 or 2) These inputs are for use with the Dynojet quickshifter. Insert the wires from the Dynojet quickshifter into the SHIFTER inputs. The polarity of the wires is not important.
- Speed-** If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quickshifter.
- Analog-** This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the control center software.
- Crank-** Do **NOT** connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

## WIRE CONNECTIONS:

To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.

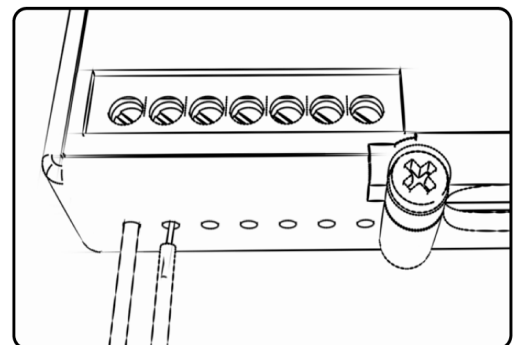

# INSTALLING THE POWER COMMANDER V



INSTALL PCV


- 1 Remove the seat.
- 2 Prop the front of the fuel tank up.
- 3 Install the PCV on top of the battery using the stock rubber strap to secure the PCV in place.
- 4 Attach the ground wire of the PCV to the negative (-) side of the battery.



CONNECT INJECTORS

- 5 Plug the PCV in-line of the stock injectors and wiring harness.

*PCV ORANGE wires go to the #1 cylinder (left)*

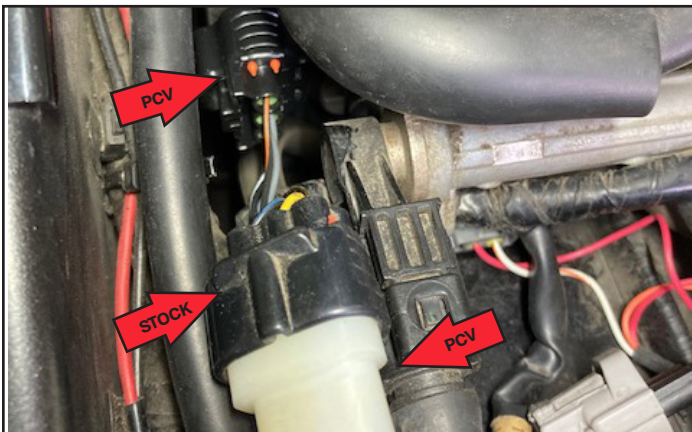

CONNECT TPS

- 6 Plug the PCV in-line of the Throttle Position Sensor and stock wiring harness.  
*The TPS is located on the left hand side of the throttle body.*
- 7 Reinstall the fuel tank and bodywork.



# **PUSH THE LIMIT**

**2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - [DYNOJET.COM](http://DYNOJET.COM)**  
**© 2019 DYNOJET RESEARCH ALL RIGHTS RESERVED**